

CATALOGO
DE PIEZAS
PARTS BOOK
CATALOGUE
DE PIÈCES

www.lamonteseta.com



MONTESA

TO ALL MONTESA AGENTS

INSTRUCTIONS FOR USING THIS CATALOGUE

We would like that this catalogue could accomplish the aim of usefulness for - which it was intended, making easier your placing of spare parts orders.

It will no doubt be of great help if you make sure that every new modification on this model is added to this catalogue. You will receive information on such modifications in numbered MODIFIED SHEETS for each group of the motorcycle.

These MODIFIED SHEETS will be a photocopy of the original sheet concerning the affected group in which the modified items will be underlined, with indication of the serial number of the first affected motorcycle and also advising on the serial number of the first motorcycle in which modified part/parts can be used as spares.

We would advise you to place every MODIFIED SHEET before the one relating the affected group for you to easily find each modified part.

We will normally remit you as many MODIFIED SHEETS as catalogues priorly sent to you, but please feel free to ask us for as many extra copies as you need for maintaining up-to-date the catalogues of all your dealers. This will -- certainly help you, and your dealers as well, in the placing of the spare parts orders, thus benefiting every Montesa owner which is in conclusion our prime goal.

TABLE OF CONTENTS

	Page No.
INTRODUCTION	1
GENERAL DESCRIPTION	3
UTILISATION	4
Fuel	4
Tyres Pressure	4
Starting of the engine	4
Gearbox	5
Running-in period	5
Practical advice	6
MAINTENANCE	7
Carburettor	7
Air filter	7
Clutch, gearbox and front suspension lubrication	7
Cylinder and piston	7
Ignition	8
Spark Plug	9
Exhaust pipe	9
Front suspension	9
Wheels	9
Spokes	9
Chain	9
Brakes	9
Rear suspension	10
Cables	10
Twist grip	10
Petrol tank	10
Miscellaneous	10
GENERAL FEATURES AND DATA	11
Engine	11
Ignition	11
Spark plug	11
Carburettor	11
Adjustment and engine torque	11
Primary drive	12
Gearbox	12
Secondary drive	12
Wheels	13
Bearings	13
RECOMMENDATIONS FOR SERVICE	14
LUBRICATION	14
WIRING DIAGRAM	14
PARTS BOOK	14

INTRODUCTION

This Manual is intended to provide you with all necessary information so that --with your cooperation-- your machine may excel in the specific function for which it was - purposely created = MOTO-CROSS.

www.lamana.com

The technical data and practical advice furnished in this Manual is backed by our highly specialized technical team trained in years of continued research conducted both at the dyno rooms and, simultaneously, on the racing circuits by entering the prototypes in top World events.

The experience put together in this Manual is aimed firstly, to offer you a full, deep acknowledge of your machine since an intimate acquaintance and identification is always indispensable when your bike is a thoroughbred racer; and - secondly, to emphasize the most essential items worth of careful consideration for utmost performance of the machine at all times.

May we wish you outstanding sportive success with your - new bike

PERMANYER, S.A.
MONTESA Motorcycles.

GENERAL DESCRIPTION

The two-stroke, single cylinder, 3 transfer ports engine displaces 350, 4cc. with a bore of 83,5mm. and a stroke of 64 mm. Crankshaft mounted on two - bearings. Ignition by electronic flywheel magneto-alternator.

The engine is located on a frame of chrome-molybdenum alloy, stretched out without welding. Double cradle of great strength and lightness.

MARZOCCHI telescopic fork front suspension with duraluminum crowns. -
Rear suspension is of the swinging type on bronze bearings with two-way - shock absorbers with settable initial load, very light and efficient.

The carburettor, rubber mounted, has a Ø 36 mm. diffuser with air intake - through a poliurethane filter element located under the seat, protected by a - silencing box.

Four-speed gearbox, in sequence, with constant mesh gears.

The multiple steel discs clutch in oil bath with constant tension springs - permits a high performance of the engine.

The size of the tyres is, 3.00" x 21" front and 4.50" x 18" rear.
Through-axle wheels with light alloy rims of high resistance.

The brakes, anchored by reaction rod, are of internal expansion type with a braking surface of 130 mm. front and 150 mm. rear.

The vehicle in a whole is the result of a careful and devoted development in the field of competition motorcycling. Each part and component has been - thoroughly tested on the racing circuits during the Moto-Cross World - series.

UTILISATION

FUEL

Use petrol mixed with oil at the rate indicated in the lubrication table at the end of this Manual.

The petrol used should not have an octane rating of less than 90.

TYRES PRESSURE

Owner can, to some extent, choose the tyre pressure according to the characteristics of the ground.

However, the normal pressures are given below as a guide:

	Dry ground		Soft or muddy ground	
	Kg/cm ²	lbs. sq. in.	Kg/cm ²	lbs. sq. in.
Front wheel	0,9	13	0,7	10
Rear wheel	0,8	11	0,6	8,5


STARTING OF THE ENGINE

- Open the fuel taps,
- If the engine is cold, press the carburettor tickler until the fuel overflows.
- Turn the kick starter lever located on the right hand side of the engine - until it can be operated.
- Open the throttle to a maximum of 1/4 of its travel.
- Kick the lever strongly (the action will have much more effectiveness if - you previously try on the lever until matching with the moment in which - the piston is in its compression phase, presenting thus more resistance, - before kicking).

GEARBOX

The gearbox has 4 speeds obtained by constant mesh gears.

Selector pedal is found at the left hand side of the engine and has to be - operated as per the figure hereunder:

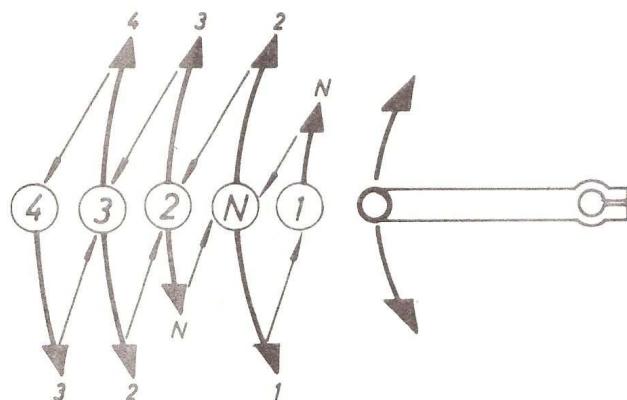

RUNNING-IN PERIOD

Due to the particular racing specification of this vehicle, special care is already taken at the Factory level when building this machine, so that no intensive running-in period is needed at the owner's level.

It is however recommended that before entering the machine in hard competition, an adaptation period for the working elements be allowed. It is estimated that such a period should represent the equivalent to two training sessions at intervals of moderate and high regime of the engine.

PRACTICAL ADVICE


Similarly to what is said for the running-in period, before entering the machine in competition, it is recommended that,

the spokes,

- a/ should be retightened after a few laps of the first training session --to avoid undue stresses, all of them should be equally tightened--, and
- b/ repeat the same operations as in a/ after a bigger number of laps have been completed but still during the first training session.

the chain,

should be inspected on the opportunity of checking the spokes --as per above-- and, if necessary, be retightened. The vertical play at the crossing point with the rear arm axle should be of 30 mm. from the rubber sleeve on that arm. (see figure hereunder).

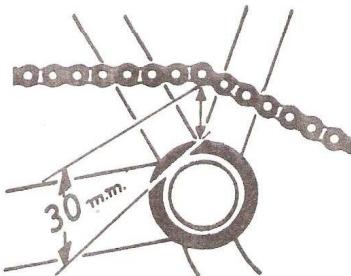

MAINTENANCE

To keep up the racing performance of this vehicle, it is highly recommended to observe the following Maintenance hints carefully.

CARBURETTOR

The only maintenance of the carburettor will consist of a thorough cleaning of all its components after each race or equivalent training session.

When cleaning or declogging the jets never use a wire or similar implement since this could damage the passage and alter the carburetion.

AIR FILTER

Inspection and cleaning of this component is vital for the performance and durability of the engine.

www.hanmeta.com
After cleaning with petrol, soak the filter element with SAE-20 oil before replacing the element in the air filter box.
Do it after each race heat or equivalent training session.

CLUTCH, GEARBOX AND FRONT SUSPENSION LUBRICATION

Replace the oil in these mechanisms after the first race and, thereafter, - every 3 races or equivalent training sessions.

Quantities and oil-types as indicated in the Lubrication Chart in this Book.

Levels should of course be checked often.

CYLINDER AND PISTON

These important components should be inspected periodically so as to make sure that the liner, piston and/or ring do not bear any damage or excessive wear.

Such inspection is recommended every 2 races including training.

To carry out that inspection proceed as follows:

Dismantling:

- Remove petrol tank, carburettor and exhaust system.
- Remove cylinder-head.
- Remove cylinder and protect the crankcases opening from dirt.
- Remove the piston ring.

Inspection:

Check the wear of the piston ring as follows:

- Lead of the ring into the lower part of the liner. If the gap between ends is of more than 0,85 mm. (0,033 in.), replace with a new set of rings.

Check the wear of the cylinder:

- Lead one new piston ring into the stroke area of the liner. If the gap between ends is of more than 0,73 mm. (0,028 in.), the liner should be rebored and an oversize piston be fitted (piston oversizes availability is indicated in this Book under Chapter "GENERAL FEATURES AND DATA")

Mounting:

Reverse operation indicated for "Dismantling" bearing in mind to replace the cylinder gasket. Have the nuts of the cylinder and of the cylinder-head moderately fastened and the torque tighten them in an alternate manner according to the torque data indicated under Chapter "GENERAL FEATURES AND DATA" in this Book.

Before fitting the piston in the cylinder it is of course recommended to check the positionning of the rings in their grooves, particularly as to their stop pins.

To ease the leading of the piston into the cylinder, position of the piston should be at its low dead center.

Notice:

While in the process of the inspection just described, remove the carbon deposits in the cylinder-head, piston and exhaust port, periodically.

IGNITION

Since electronic ignition is fitted, no particular maintenance is required. The timing is set at the factory level and will not vary.

If for any reason removal of the rotor is needed, its original mounting position must be carefully observed when putting it back.

66M/0976

SPARK PLUG

It should be checked and cleaned very often. The electrodes gap must be of 0,5 mm.

Replacement is left to your judgement; from a theoretical but effective standpoint of view, it should be replaced before each race.

EXHAUST PIPE

Its rubber fixation to the frame must be inspected periodically since it is - intended to absorb vibration which, otherwise, might damage either the - pipe or the threaded attachment to the cylinder.

It is also recommended to check the tightening torque of the exhaust nut to the cylinder and the condition of the safety wire.

FRONT SUSPENSION

Carefully check the accordion-type rubber protectors for cracks or other damage which will allow dust and dirt to get in, ruining the oil seals with - ensuing oil leakage.

WHEELS

Periodical inspection of the tyres' anchorings is needed. If inoperative, - continued successive braking could rip away the tube valve.

SPOKES

As indicated under Chapter "UTILISATION", the spokes should be inspect ed and tightened evenly after each race heat or equivalent training session.

CHAIN

While in the process of removing the chain for thorough cleaning and lubricat ion, its condition must be carefully inspected.

Also, when mounted and tightened, the vertical play should be as described in - page 5. A Too tightened chain will cause problems.

The chain should be replaced every 3 to 4 races.

BRAKES

For efficacity, avoid excessive free play of the commanding hand lever and pedal using the stretchers, when needed, to compensate the wearing out of - the brake linings.

The stretchers are found at the end of the operating rod -rear brake-, and at the top end of the cable cover at the handlebar -front brake.

After adjusting the free play conveniently, make sure that the wheels - rotate freely.

Periodically --after each race-- It is recommended to remove the wheels for cleaning the inside of the hubs, check the condition of the brake linings, and grease lightly the rotating, pivoting areas.

REAR SUSPENSION

It is important to keep the bronze bearings of the swinging arm permanently lubricated. Oil SAE-40 must be used.

It is therefore recommended to ensure this lubrication before each race - and frequently check the level of oil through the holes provided both for - filling and checking.

CABLES

Maintain them duly lubricated before each race using their oilers. Oil - SAE-40 must be used.

Replacement of the throttle cable is advised every 3 races.

TWIST GRIP

Check and grease before each race.

PETROL TANK

Although this item does not require any particular maintenance, it is - however important to inspect frequently its rubber mounting to the frame.

MISCELLANEOUS

Before each racing meeting, it is recommended to have all nuts, bolts, etc. of the machine inspected for correct tightening. Those relating to the - engine group and front suspension should be checked more frequently, that is, in each race heat or equivalent training session.

Logically, if before any of the checks above are conducted some deficiency of the vehicle is felt, the inspection of the trouble-area would be advanced to determine its scope and the need for repair.

GENERAL FEATURES AND DATA

ENGINE

Cycle	2 stroke
Cylinder	single
Bore	83,5 mm.
Stroke	64 mm.
Capacity	350,4 c.c.
Compression ratio	12:1

IGNITION

112 Electronic alternator flywheel	MOTOPLAT 9600194-1
Spark advance at t.d.c.	3 mm. (22° over flywheel)

SPARK PLUG

Bosch thermic grade	270
Electrodes gap	0,5 + 0,6mm. (0,196 + 0,235 in.)
Thread	14M(x1,25)x1 1/2"

Recommended types:

CHAMPION	N-60R
N.G.K.	B-8ENP
K.L.G.	FE-265
LODGE	RL47
BOSCH	W270T17

CARBURETTOR

Make	BING 54
Type	11.612/0
Diffuser diameter	36mm.
Main jet	165
Low speed jet	40 - 80
Gas valve	0
Sprayer	6,5x1,5 (long-splitted)
Needle gauge	+ 288
Needle	Nº 3
Needle positioning	

ADJUSTMENTS AND TIGHTENING TORQUE

Minimum diametral clearance between piston-cylinder	0,07mm. (0,0029 in.)
Maximum whipping crankshaft ends mounted on the crankcase	0,03 mm. (0,0012 in.)

Recommended tightening torque:

	m.Kp.	ft-lbs.
- Cylinder fixing nuts	2 to 2,5	14,5 to 18
- Cylinder head fixing nuts	3,5 to 4	25,5 to 29
- Crankshaft pinion nut	8	58
- Magneto flywheel nut	8	58
- Spur gear nut for primary transmission	2 to 2,5	14,5 to 18
- Pignon nut shift outlet	8	58
- Entrance tube fixing nut	2	14,5

PRIMARY DRIVE

Type by gearings
 Pinion crankshaft 22 teeth
 Primary transmission spur gear 45 teeth
 Transmission ratio 2,045

GEARBOX

Number of speeds 4

Pinion	Primary	Secondary	Ratio
1st gear	12 teeth	22 teeth	1,833
2nd "	14 "	20 "	1,428
3rd "	16 "	18 "	1,125
4th "	17 "	16 "	0,941

SECONDARY TRANSMISSION

Counter sprocket 12 teeth
 Toothed gear on rear hub 56 teeth
 Chain (pitch) 15,875mm. (5/8")
 -roller diameter 10,16 mm. (0,400")
 -face between plates 6,48 mm. (0,255")

WHEELS


		Spokes		Tyres	
		Quantity	Dimensions(mm)	Type	Dimensions
Front wheel	WM1/1.6	18 18	3,5x224(l. s.) 3,5x238(r. s.)	cross	3" x 21"
Rear wheel	WM3/2.15	18 9 9	4x224(l. s.) 4x197(r. s.) 4x206(r. s.)	cross	4,5" x 18"

BEARING DIMENSIONS

	Quantity	Type	Dimensions	Number
Crankshaft	2	radial	30x72x19	6306
Main shaft, right side	1	angular interface	15x35x11	7202
Main shaft, left side	1	radial	20x47x14	6204
Secondary shaft, right side	1	radial	20x47x14	6204
Secondary shaft, left side	1	radial	15x35x11	6202
Front wheel	2	radial(C-3 set)	17x40x12	6203/C-3
Rear wheel	2	radial(C-3 set)	17x40x12	6203/C-3

GENERAL DIMENSIONS

Tank capacity 7L. (1,83 USA gal.)
(1,52 imp. gal.)
Weight 99 Kg. (218,2 lbs.)

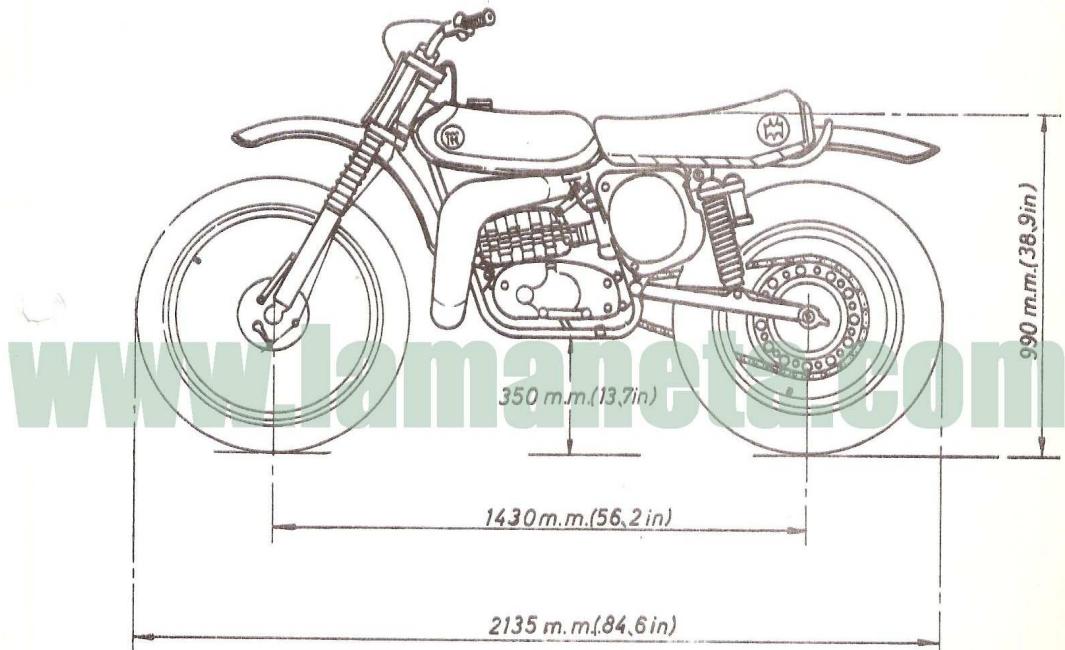

RECOMMENDATIONS FOR SERVICE

Although the observance of the Maintenance guidelines already provided in this Book will positively help to keep the machine trouble-free, repairs - will be needed from time to time and consequently the following is advised:


- Any specialized service or repair should be conducted at a duly - authorized Montesa Service Shop.
- To secure the best performance and durability of the machine, - only MONTESA genuine spare parts should be used,
- When ordering spare parts,
 - a/ Order by item number as easily found in the exploded drawings in this Book, and
 - b/ Mention the serial number of the machine as appears on the engine case and on the frame.

Notice:

All the information --both written and graphical-- contended in this Manual is merely descriptive and parts and/or components of the machine herein - described may change at any time.



INSTALACION ELECTRICA-WIRING DIAGRAM-PLAN DE CABLAGE



1 Volante magnético	Magneto flywheel	Volant magnétique
2 Conversor	Ignition coil	Bobine d'allumage


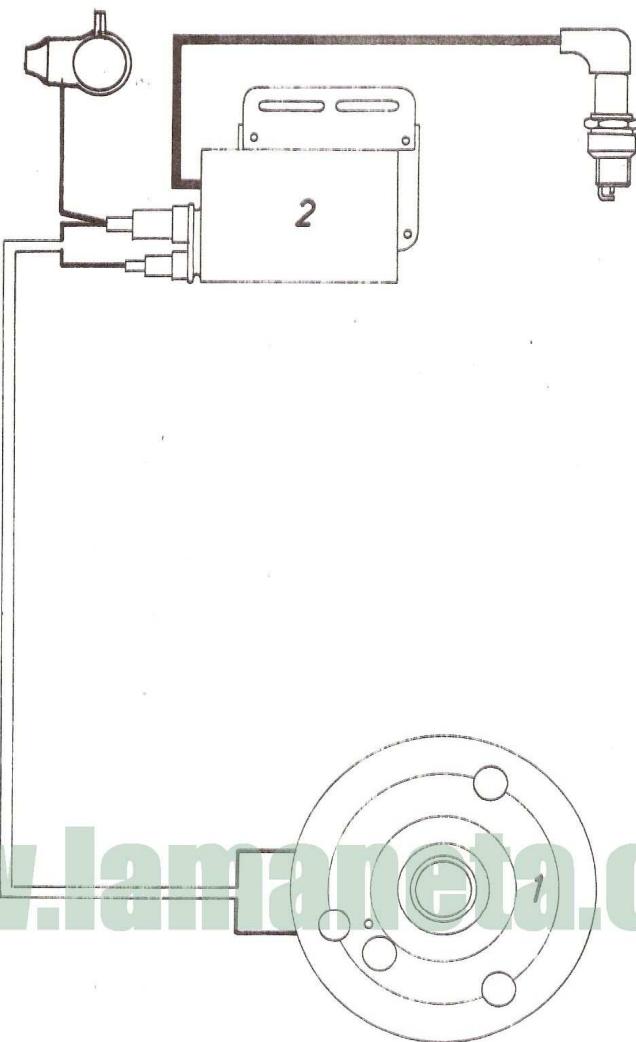




CAPRA 360 VB



www.lamanta.com

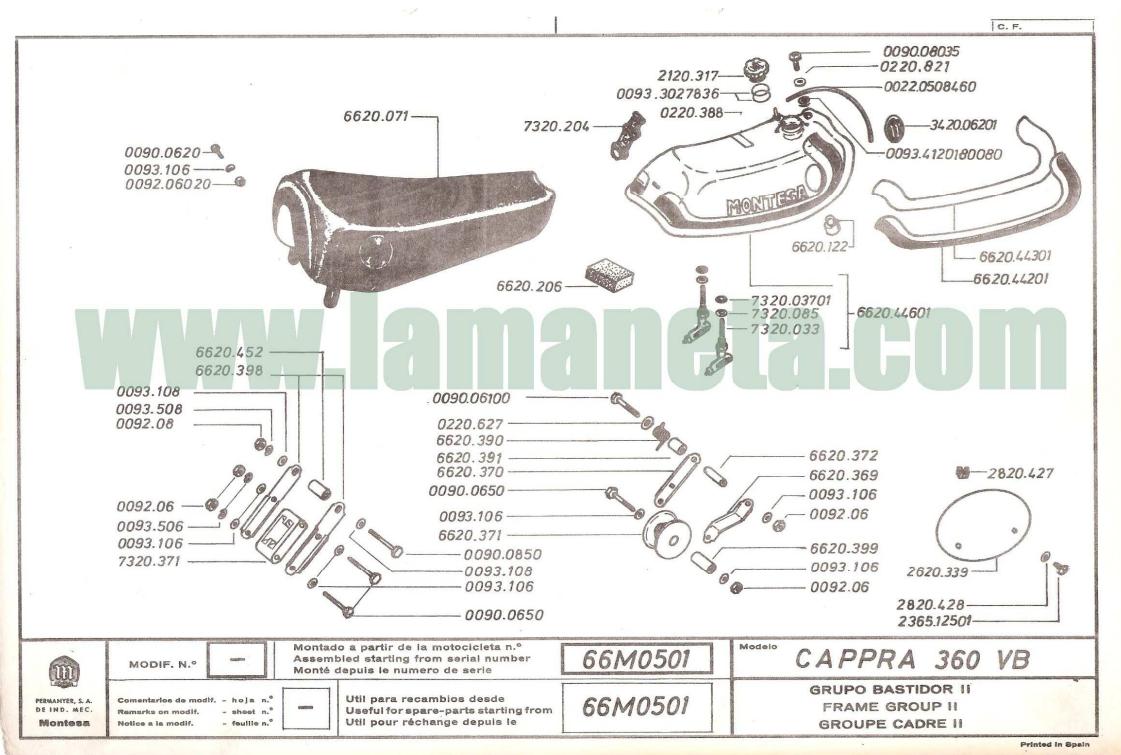
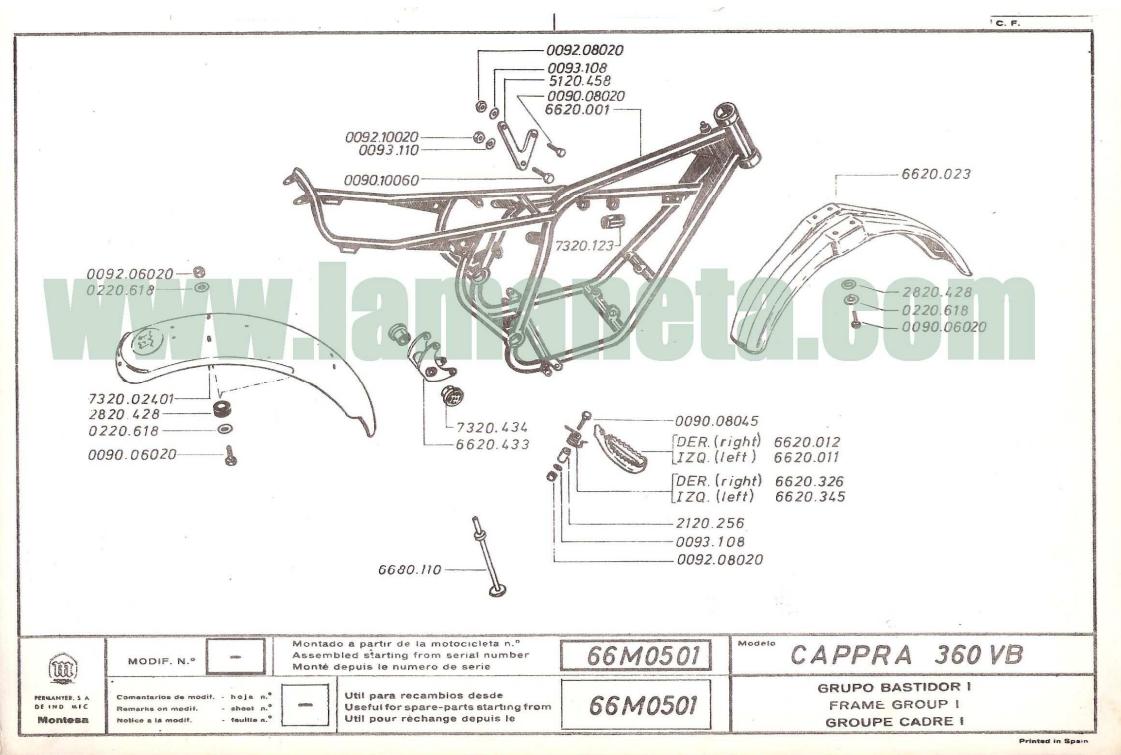


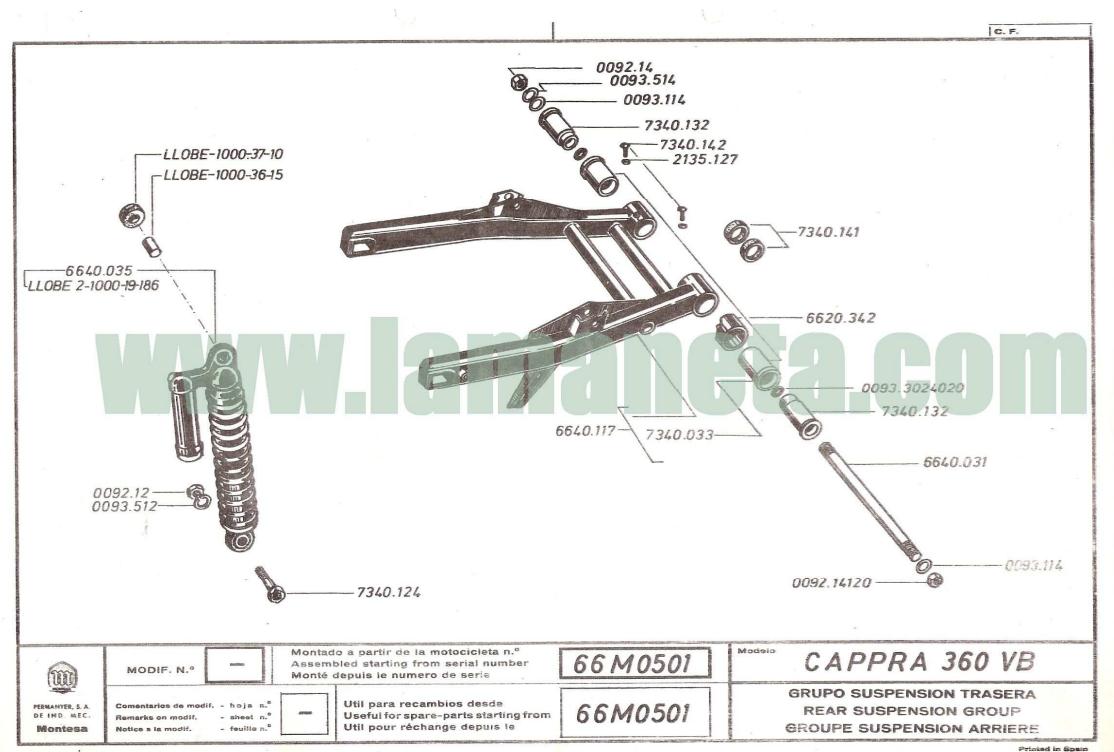
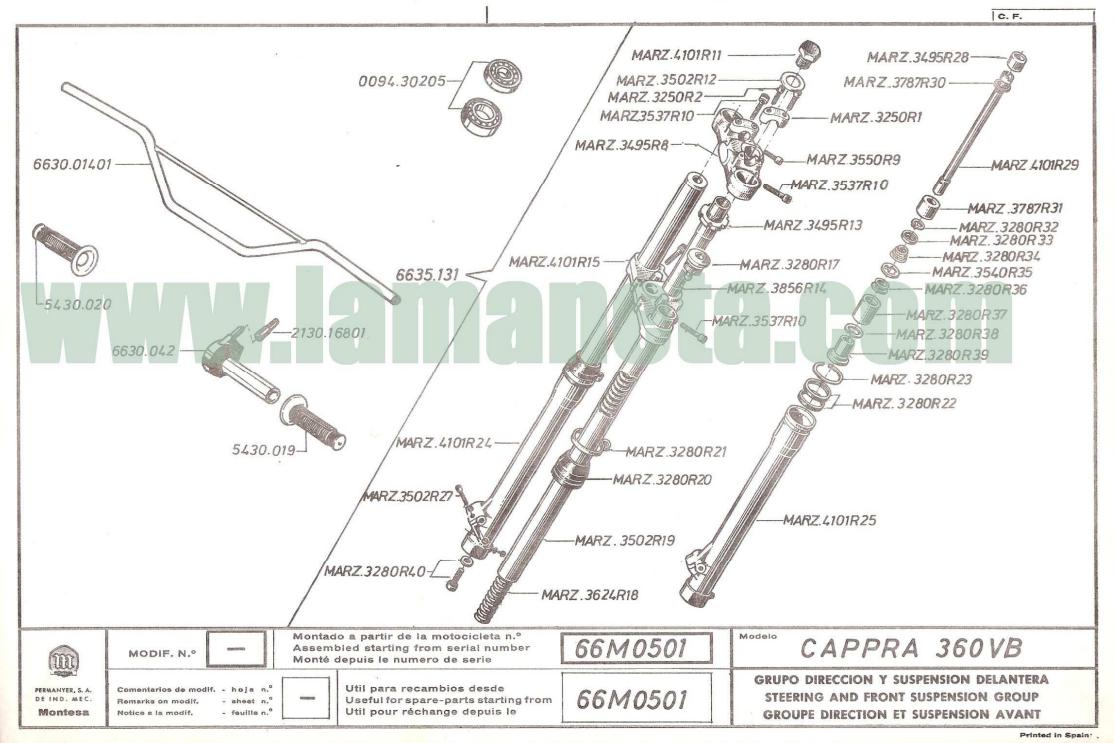


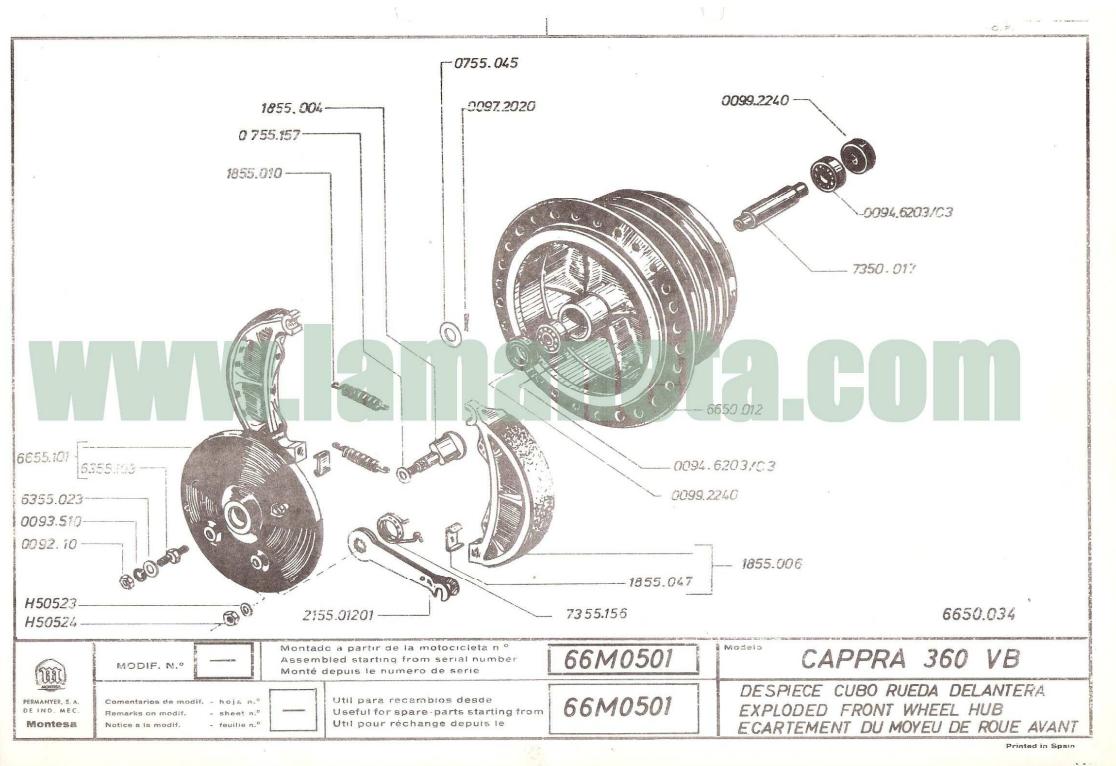
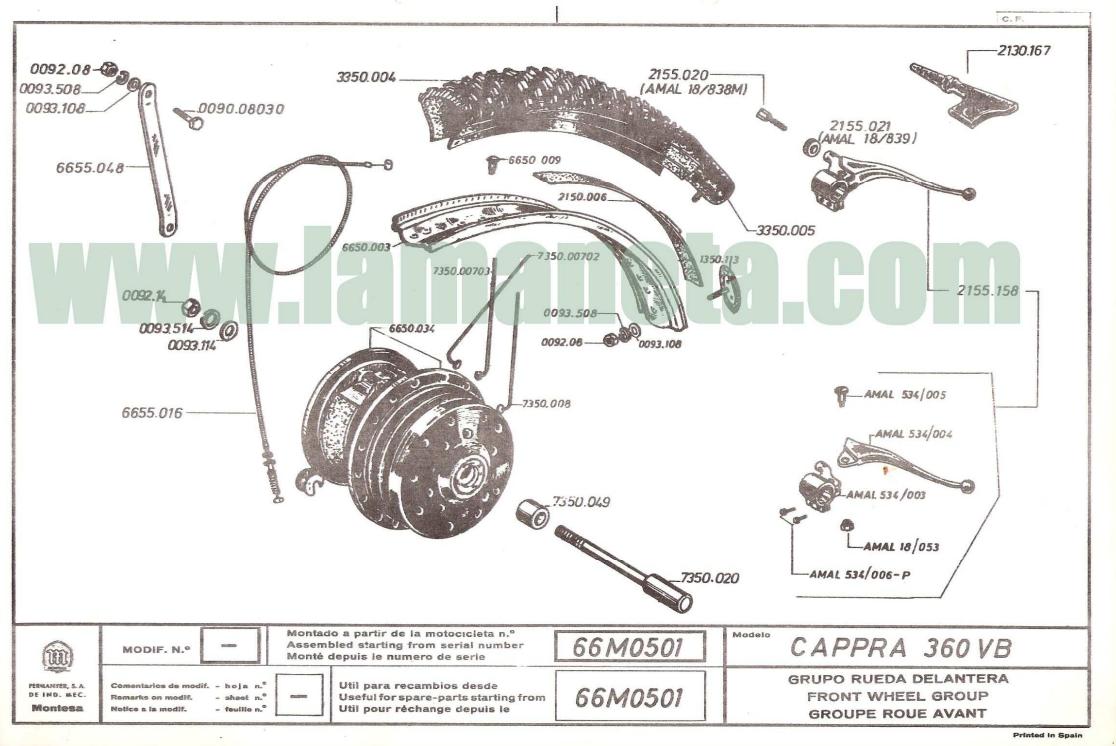


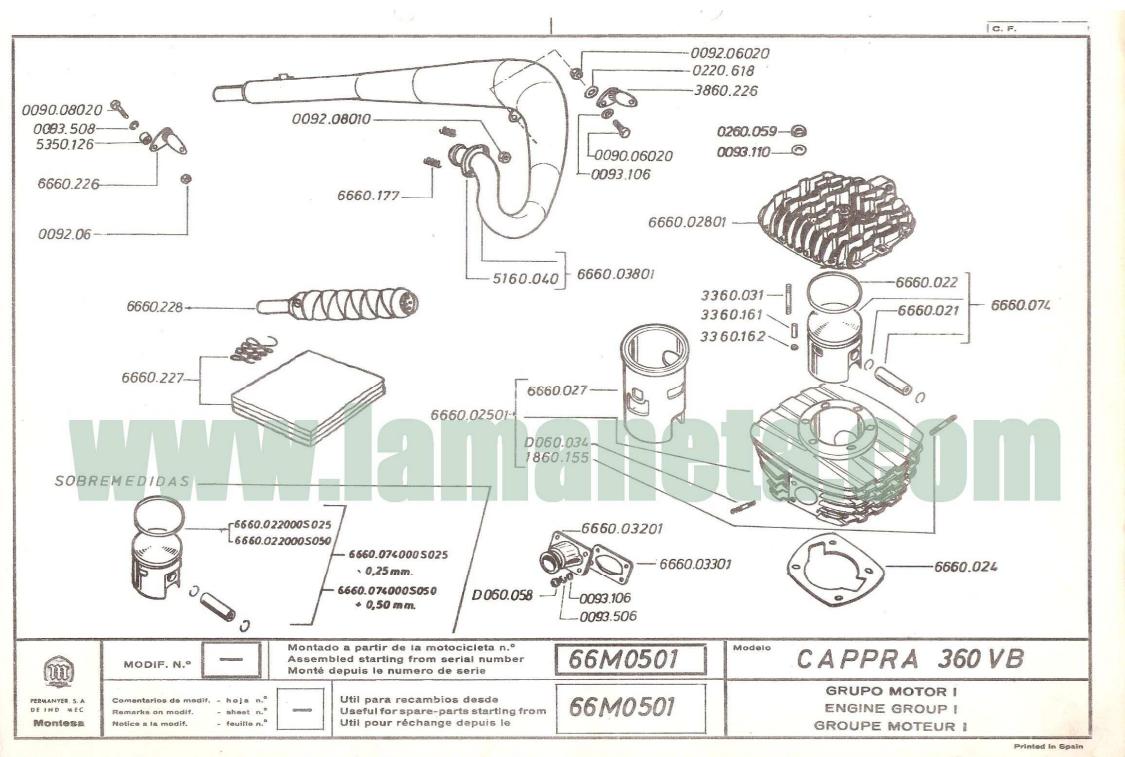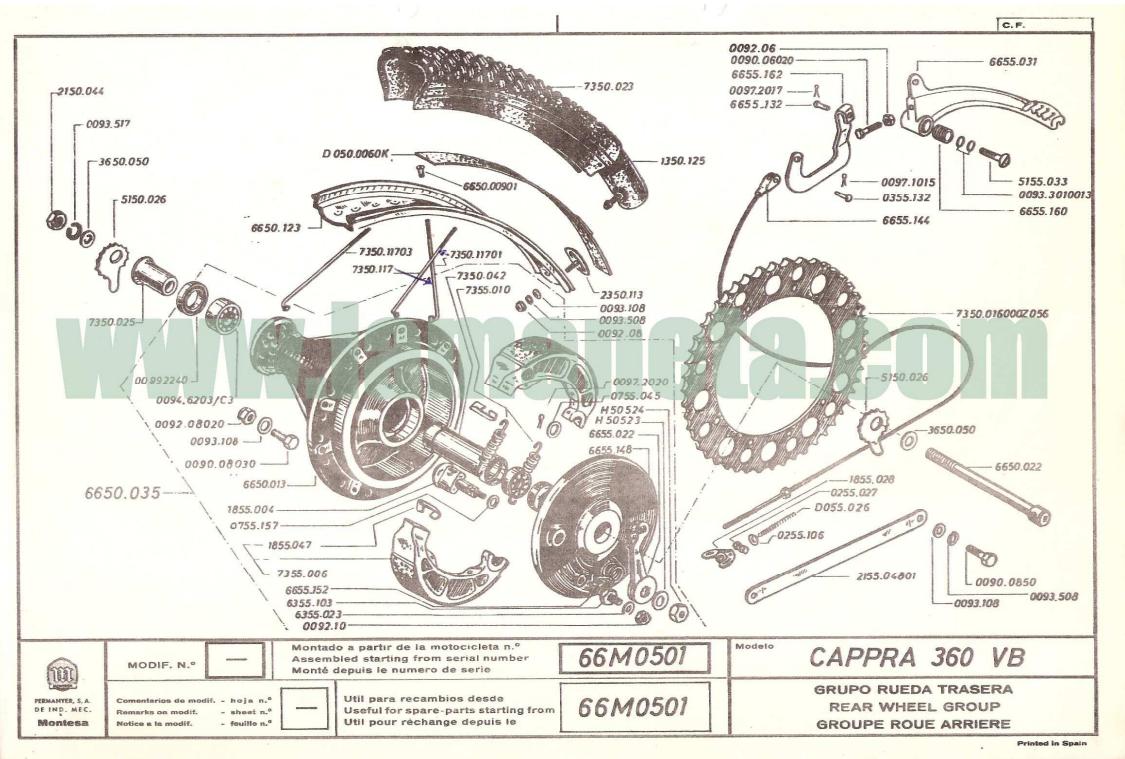


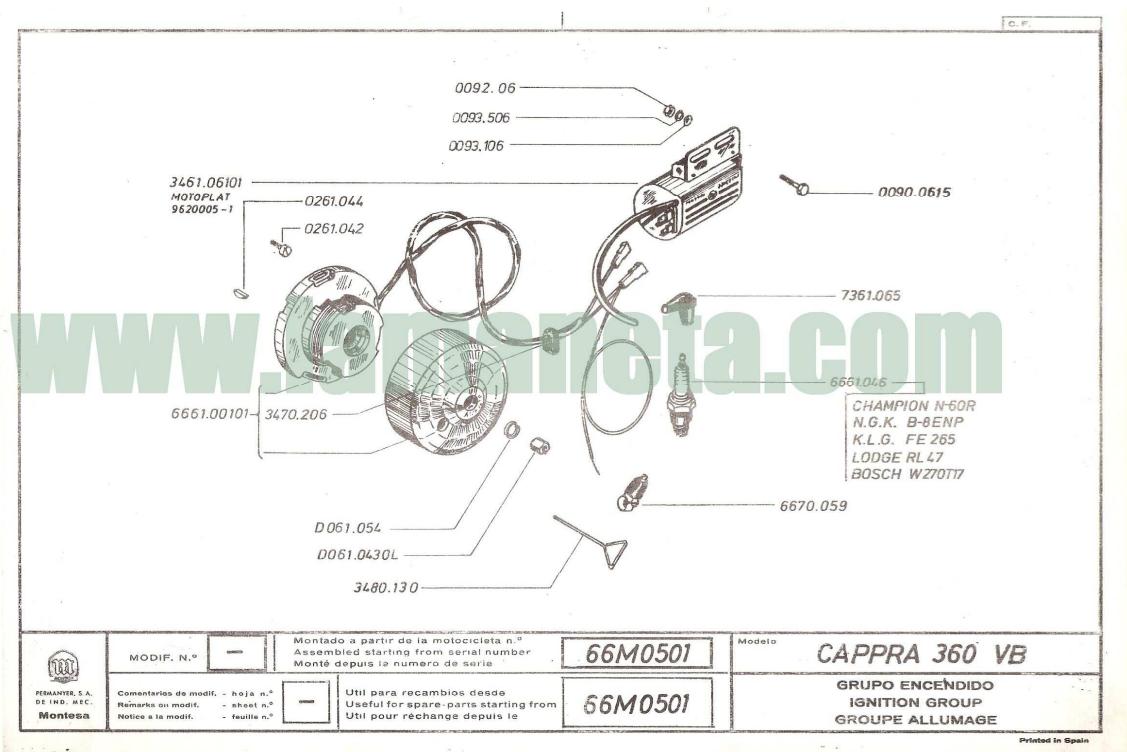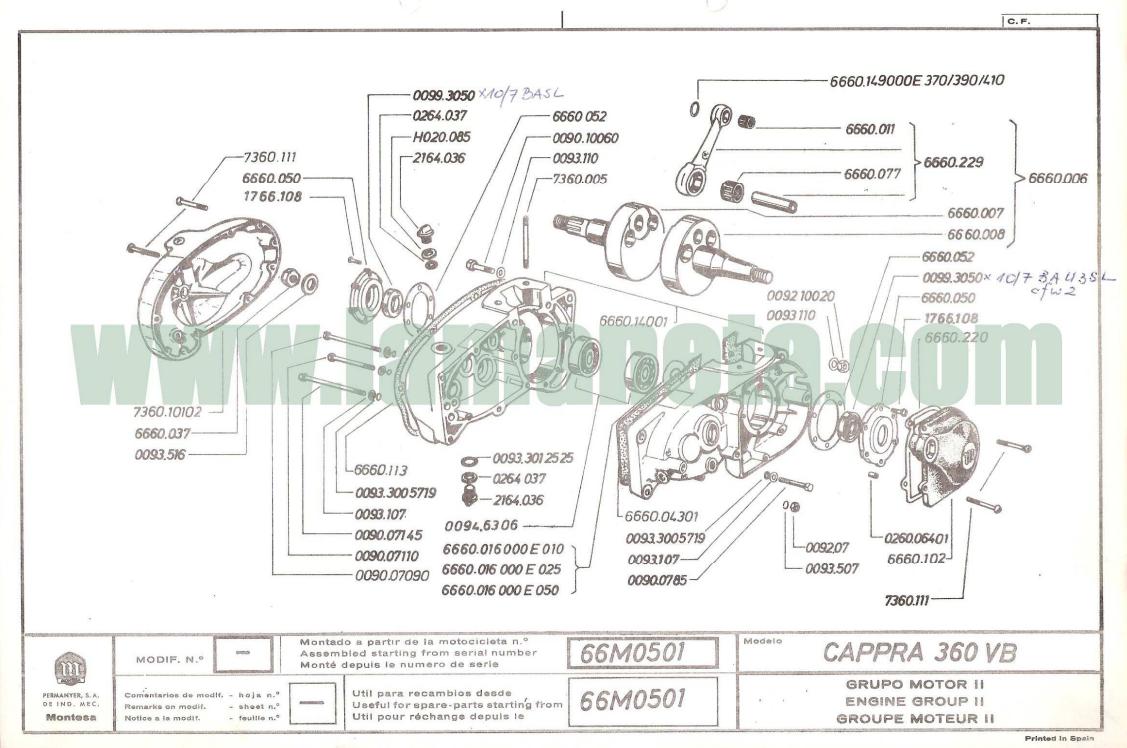

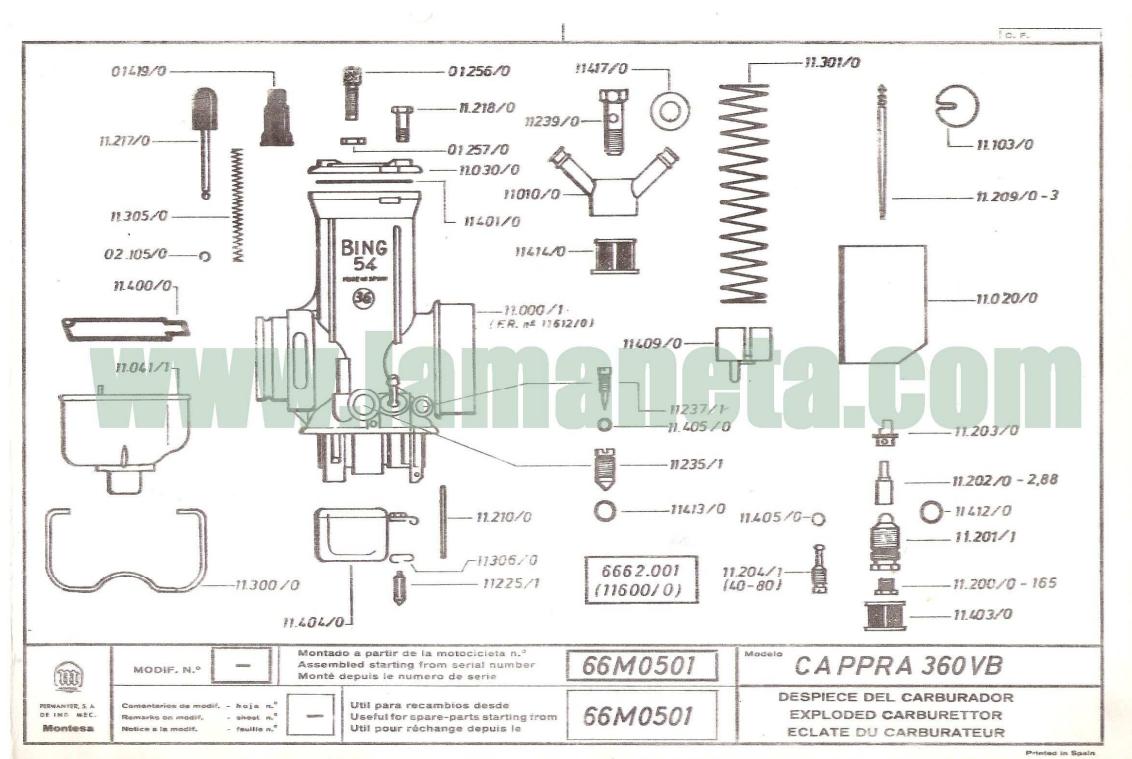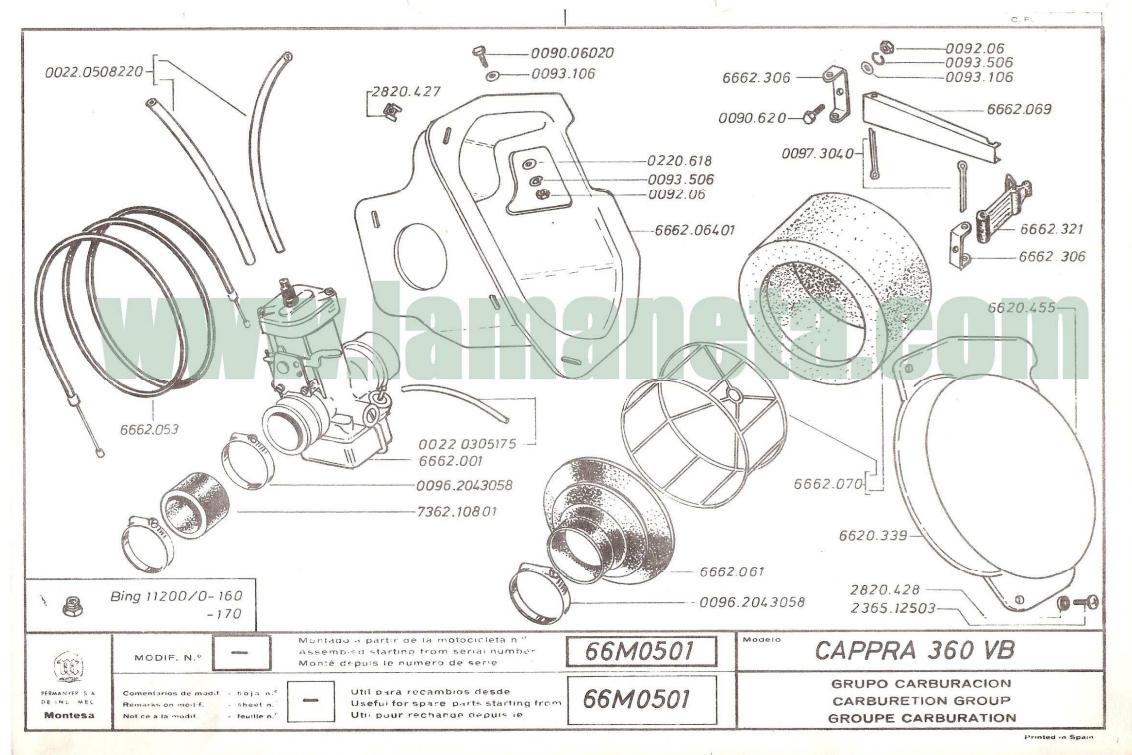

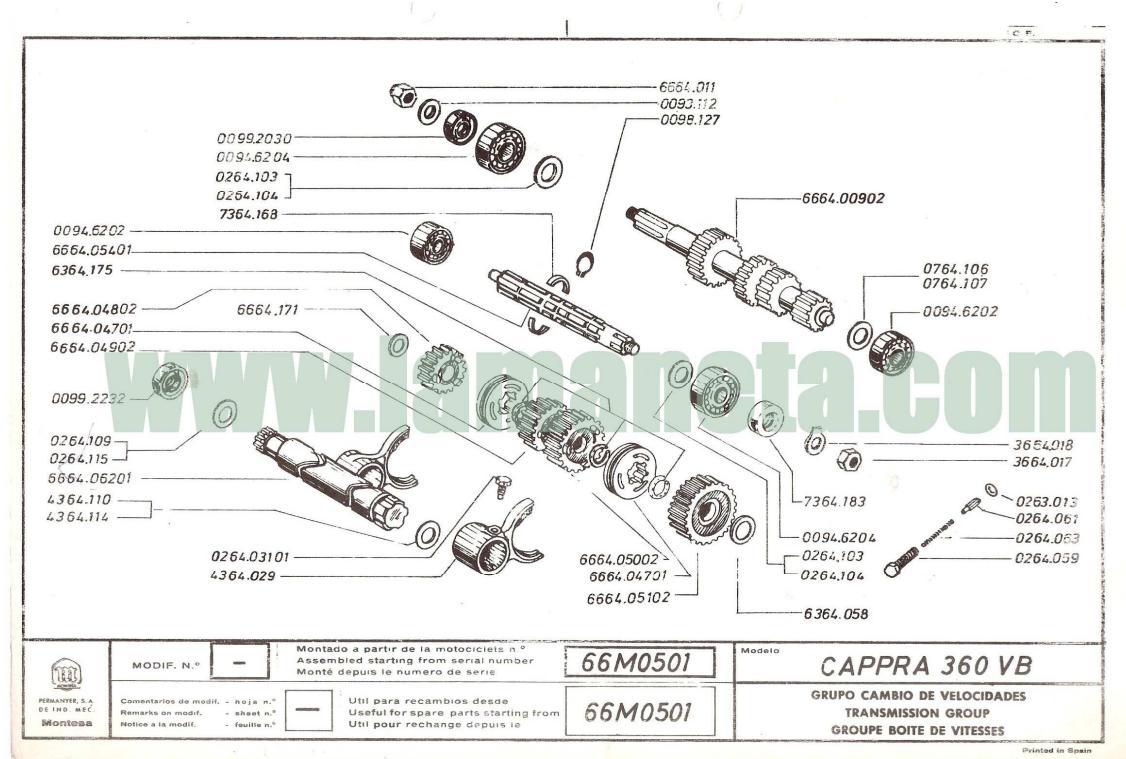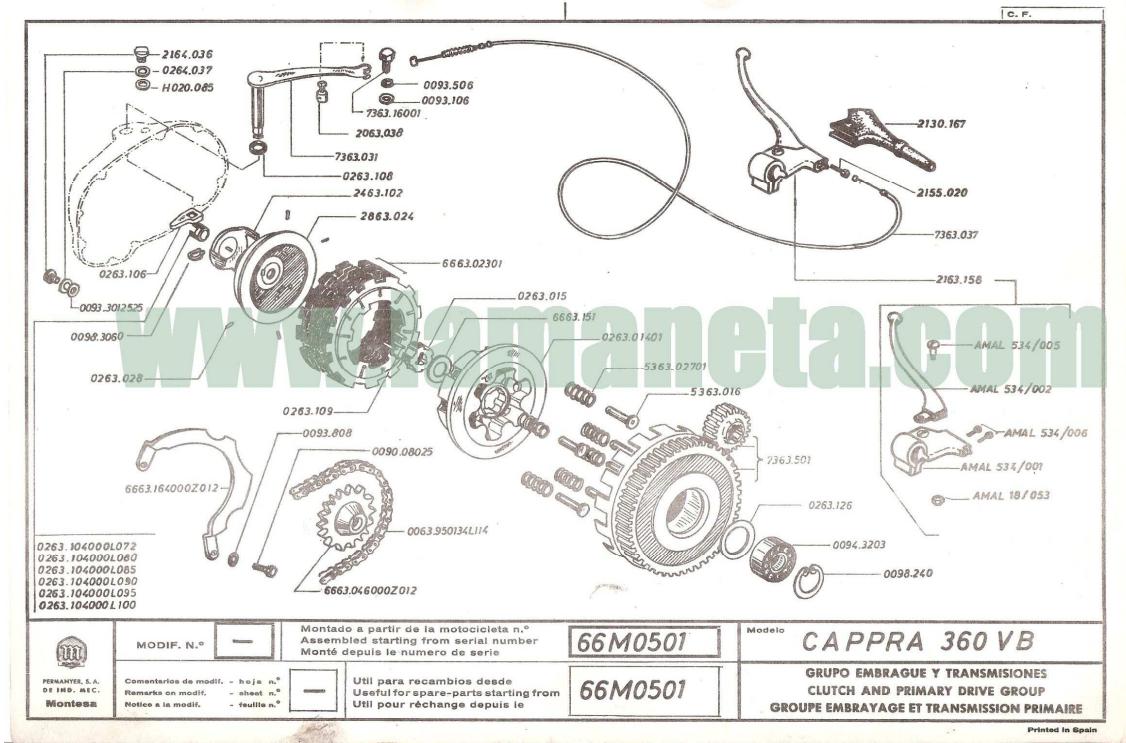

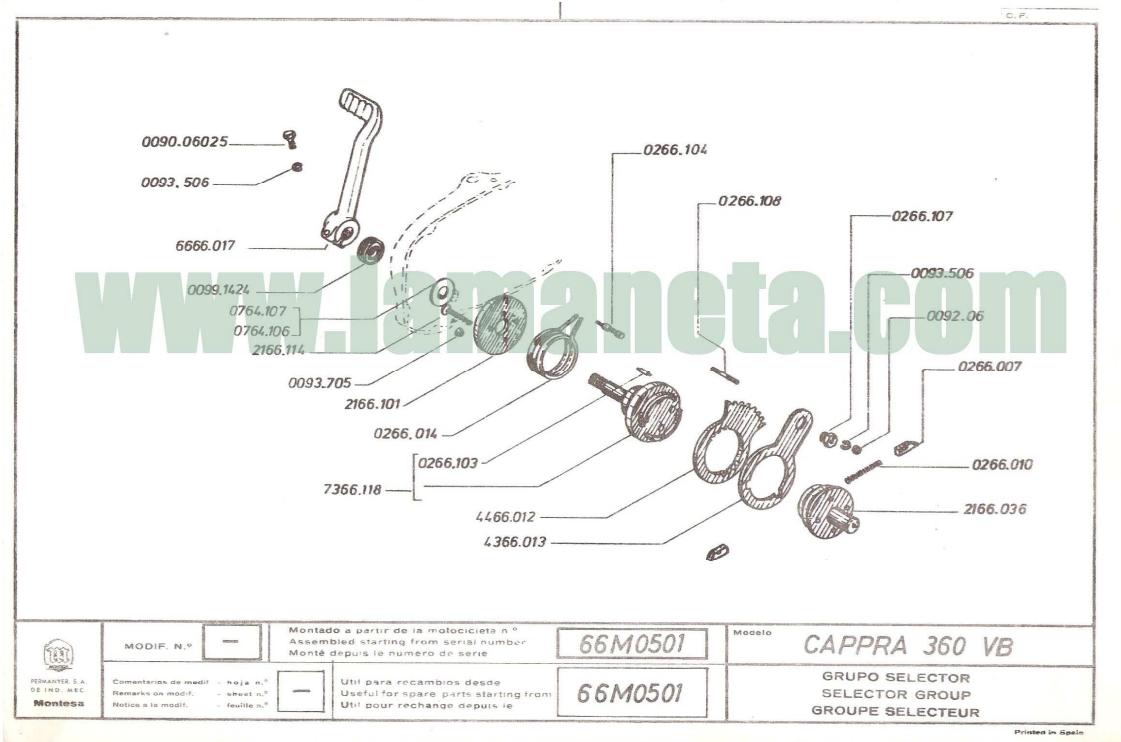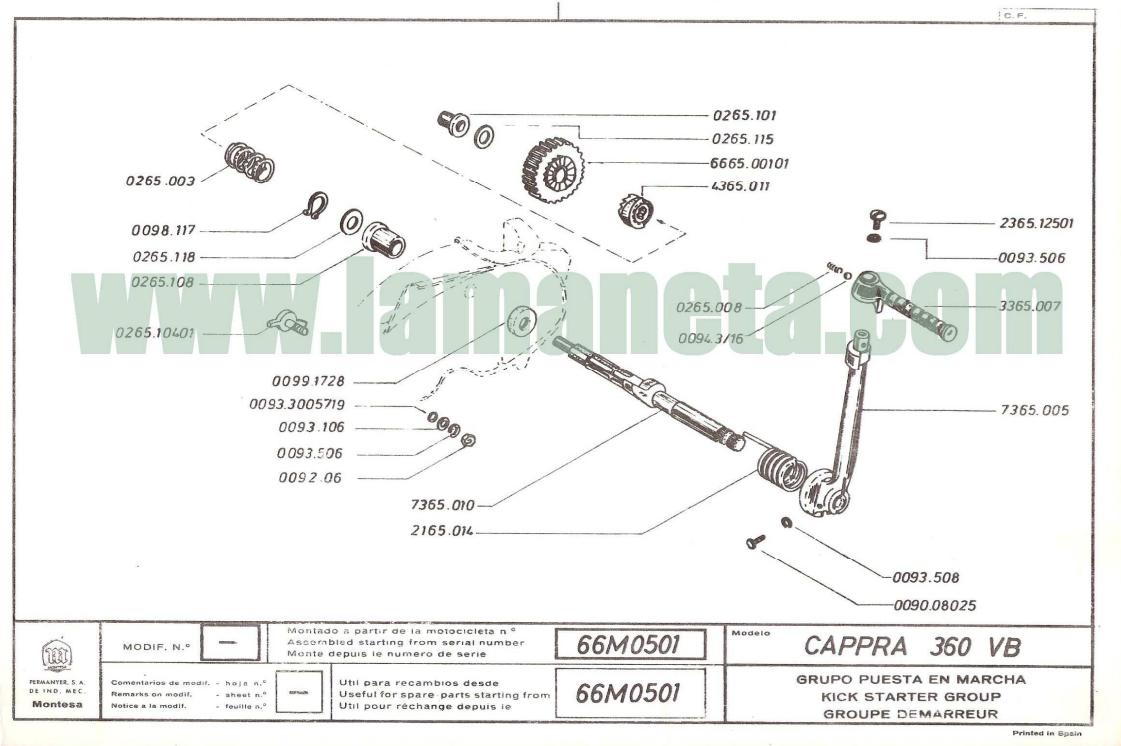

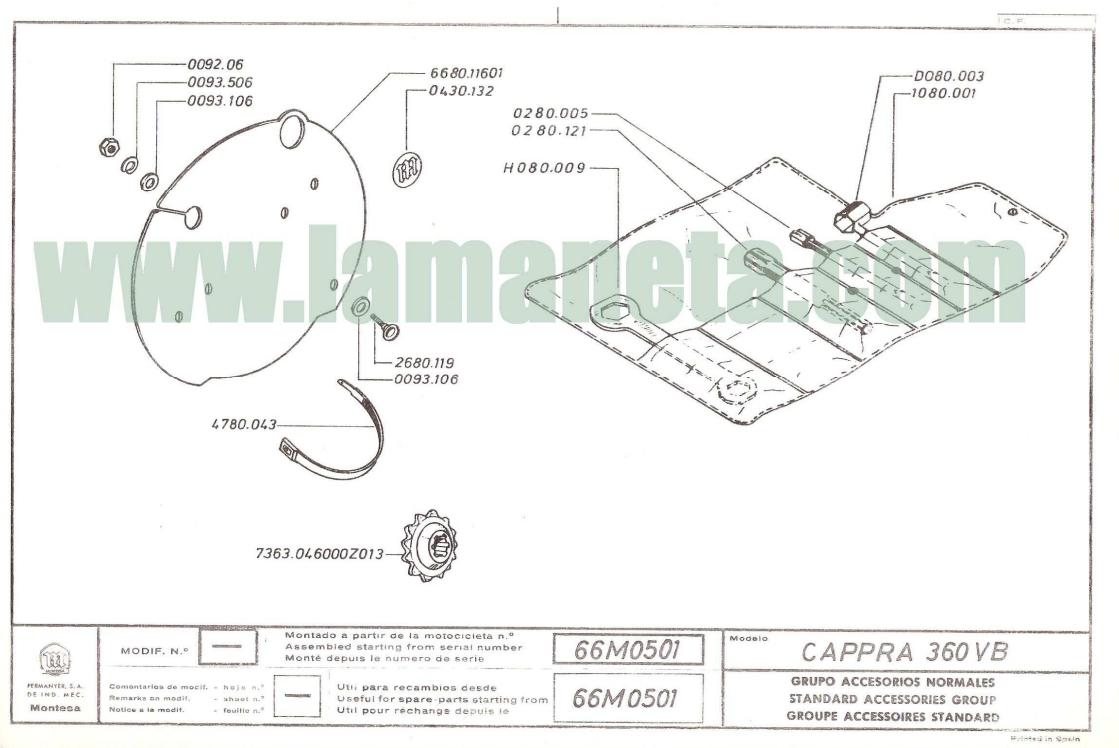

INSTRUCTIONS FOR THE USE OF THE TOOLS
DESCRIBED IN THE ATTACHED SHEET

Many of the motorcyclists are at the same time keen enthusiasts of called "do-it-yourself" stuff and actually they do prefer taking care of the maintenance of their motorcycles by themselves. That is very easy in the case of the MONTESA's as the mechanic rules on them are quite simple even to those who are not at all - experts.

Therefore, MONTESA can supply a set of tools which are very useful on that - purpose.

D087, 055 & 0687, 055

Screw it deep in the flywheel after having the nut off.

The flywheel is fastened with the immobilizer D-8769, to take the nut off and to remove it but in both cases the impulses to be done without leaning over the end of the crankshaft in order to avoid its possible off-centering.

D087, 067

This is used to tighten, to loosen or to remove the superior steering nut which is placed under the handlebar. Proceed by taking the handlebar off then loosening the cramp screw closer. This screw must be completely taken out if that nut is to be removed.

D087, 069

This tool is to be used together with the D-8755, in the way described above.

2187, 082

It will be used for the exhaust ring nut.

1387, 126, 2887, 126 to 0787, 126

This tool is to hold the wheel driving gear when its nut is either tightened or - loosened.

0287, 203 to 2887, 203

This tool is used to remove the driving gear once the nut is out (with the help of the immobilizer 0287, 206).

D087, 125

It must be screwed deep up the bottom in the spark plug place, then the piston - position can be read at the notation of the stem.

0287, 218

Having the cylinder head out, the nuts fixing the cylinder on the crankcase will be placed by inserting this key through the hole of the twisted sleeves and doing this way it is tightened or loosened, as wanted.

D087, 131 & 5387, 092

Device to loose or to tighten, as needed, the nut on bushing which blocks the steering bearing when adjusting the steering. To do this operation, first loose the nut holding the suspension upper clamp.

Apart from the operations here explained, there are others not so simple which require certain technical knowledge and more complex tools and it is advisable to leave them to the MONTESA Official Agents, who are prepared to attend the best and the quickest way to every enquire on repair.

I.C.P.

CROQUIS — SKETCH	ARTICULO—ITEM—ARTICLE	DENOMINACION UTILAJE—DENOMINATION OF THE TOOLING—OUTILS D'ATELIER	OBSERVACIONES — REMARKS
	D087.055	Extractor volante magnético. Magnetic flywheel puller. Extructeur volant magnétique.	
	D087.067	Llave tuerca fij. rodamiento dirección Wrench for the nut locking the steering Clef écrou fixation roulement direction	
	D087.069	Inmovilizador volante magnético Holding tool for magnetic flywheel Outil bloqueur du volant magnétique	
	1387.126	Inmovilizador piñón mando rueda, Wheel driving sprocket blocker. Inmobilisateur pignon comande roue.	
	D087.125	Medidor avance encendido, Ignition advance checking tool. Mesureur avance allumage.	
	0287.218	Llave tuerca fijación cilindro, Allen wrench for the cylinder holding screws. Clef allen pour fixation cylindre.	
	MODIF. N.º	Montado a partir de la motocicleta n.º Assembled starting from serial number Monté depuis le numéro de série	Modelo
PERMANENTES S.A. DE IND. MEC. Montesa			CAPRA 360 VB 1º
Comentarios de modif. - hoja n.º Remarks on modif. Notice à la modif.	- sheet n.º - feuille n.º	Util para recambios desde Useful for spare-parts starting from Util pour réchange depuis le	HERRAMIENTAS DE TALLER TOOLS OUTILS D'ATELIER

Printed in Spain

CROQUIS — SKETCH	ARTICULO—ITEM—ARTICLE	DENOMINACION UTILAJE—DENOMINATION OF THE TOOLING—OUTILS D'ATELIER	OBSERVACIONES — REMARKS
	7387.11701	Punzón eje émbolo. Piston pin driving punch. Poinçon axe piston.	
	0287.084	Inmovilizador plato embrague. Clutch disc blocker. Inmobilitateur plat d'embrayage.	
	0287.20401	Montador retenedor ejes primario y secundario, Main and secondary shafts oil seals mounting tool. Monteur retenue	
	4387.227 4387.227000D	Util comprobar salto cigüeñal sobre cárteres. Tool for checking the crankshaft offset on crankcases. Outil pour vérifier saut vilebrequin sur acrters.	Izq-left-gauche. Der-right-droite.
	0287.215	Montador retenedor eje p.e.m. Starter shaft retainer mounting tool. Monteur retenue d'huile axe mise en marche.	
	5387.089	Punzón montador cojinete dirección s/bastidor. Punch for mounting the steering bearing on the frame. Poinçon monteur roulement direction sur châssis.	
	0287.103	Extractor cojinete dirección sobre bastidor. Puller for the bearing on the frame of the steering. Extracteur roulement direction sur châssis.	
	0287.110	Tubo monta cazoleta inferior s/tija y cojinete s/cigüeñal. Tube for fitting the lower cup on the stem and crankshaft bearing. Tube monte bouterolle intérieure sur tige et roulement direction.	
	2887.112	Soporte motor. Bech motor cradle. Support moteur sur banc de travail.	
	MODIF. N.º	Montado a partir de la motocicleta n.º Assembled starting from serial number Monté depuis le numéro de série	Modelo
PERMANENTES S.A. DE IND. MEC. Montesa			CAPRA 360 VB
Comentarios de modif. - hoja n.º Remarks on modif. Notice à la modif.	- sheet n.º - feuille n.º	Util para recambios desde Useful for spare-parts starting from Util pour réchange depuis le	2º
		66M0501	HERRAMIENTAS DE TALLER TOOLS OUTILS D'ATELIER

Printed in Spain

Supplementary material

CATALOGO
DE PIEZAS
PARTS BOOK
CATALOGUE
DE PIECES

www.lamaneta.com
MONTESA



A TODOS LOS AGENTES MONTESA

INSTRUCCIONES PARA EL USO DE ESTE CATALOGO.-

Sería nuestro deseo que, el presente catálogo, cumpliera el objetivo de utilidad para el que fué creado, facilitando sus pedidos de piezas a recambios.



Igualmente puede serle de una ayuda inapreciable si tiene en cuenta de ir añadiéndole todas las variaciones que se vayan introduciendo, en el presente modelo, cuyos datos haremos llegar a usted en forma de LAMINAS MODIFICADAS, numeradas, para cada grupo, según se vayan produciendo.



Estas LAMINAS MODIFICADAS, serán una reproducción de la lámina del grupo afectado en la que habremos subrayado los artículos o yas piezas hayan variado, con la indicación del número de motocicleta a partir de la cual se pone en marcha la modificación referida, y de aquél, que indica la motocicleta, a partir de la cual puede ser utilizada como recambio, la pieza o piezas objeto de la modificación, o sea, las subrayadas en la lámina.



Les aconsejamos monten las citadas LAMINAS DE MODIFICACION delante de la correspondiente al grupo afectado, lo que facilitará el trabajo de localización de la pieza modificada.



Normalmente le mandaremos a usted, tantas LAMINAS MODIFICADAS como Catálogos le tengamos enviados, pero no dude en solicitarnos las que precise de ellas, para poder mantener al dia los Catálogos que tengan repartidos en su red de Sub-Agentes, lo que indiscutiblemente, le facilitará a usted la labor de confección de los pedidos a Recambios y a ellos el solicitarlos, con lo que el usuario de nuestras motocicletas quedará notablemente beneficiado, fin que en definitiva, todos perseguimos.



PERMANYER, S.A.
Motocicletas Montesa.

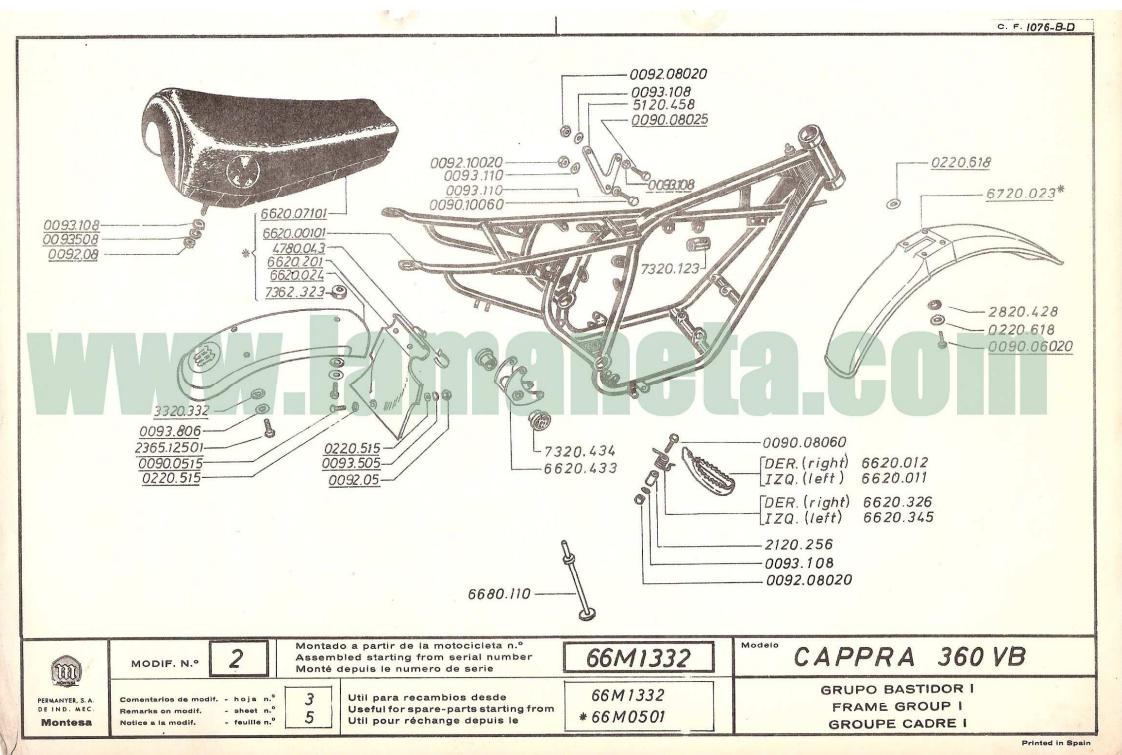
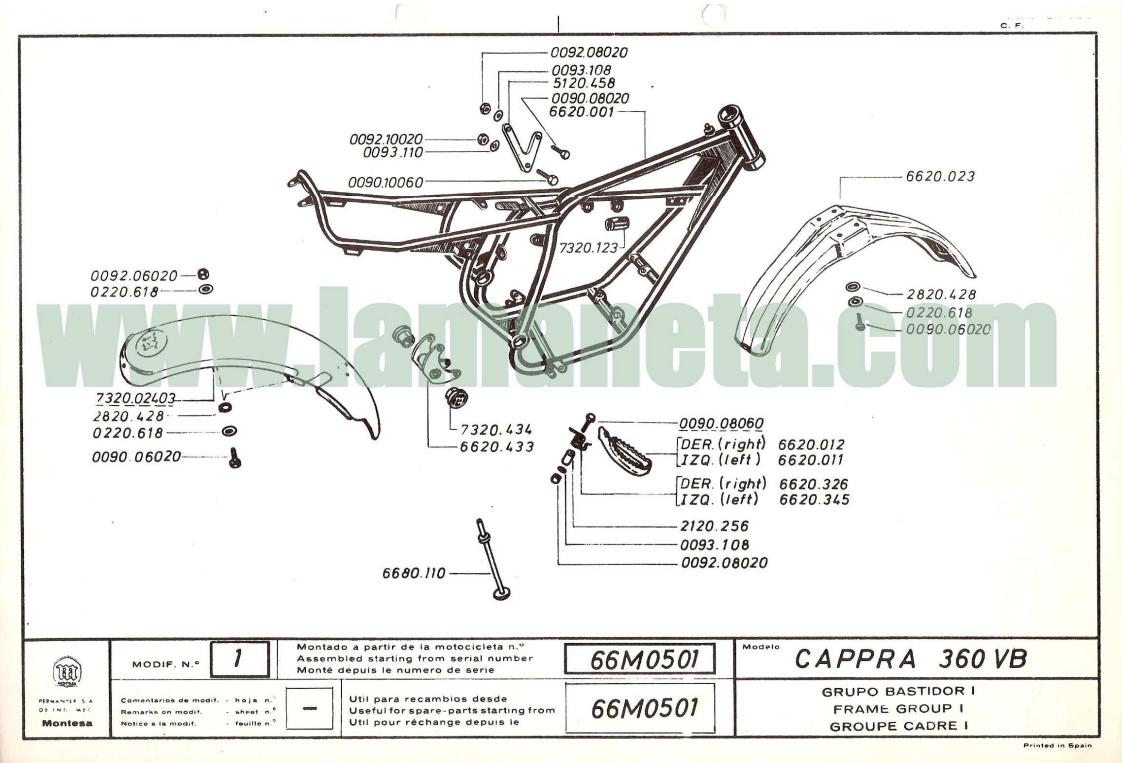


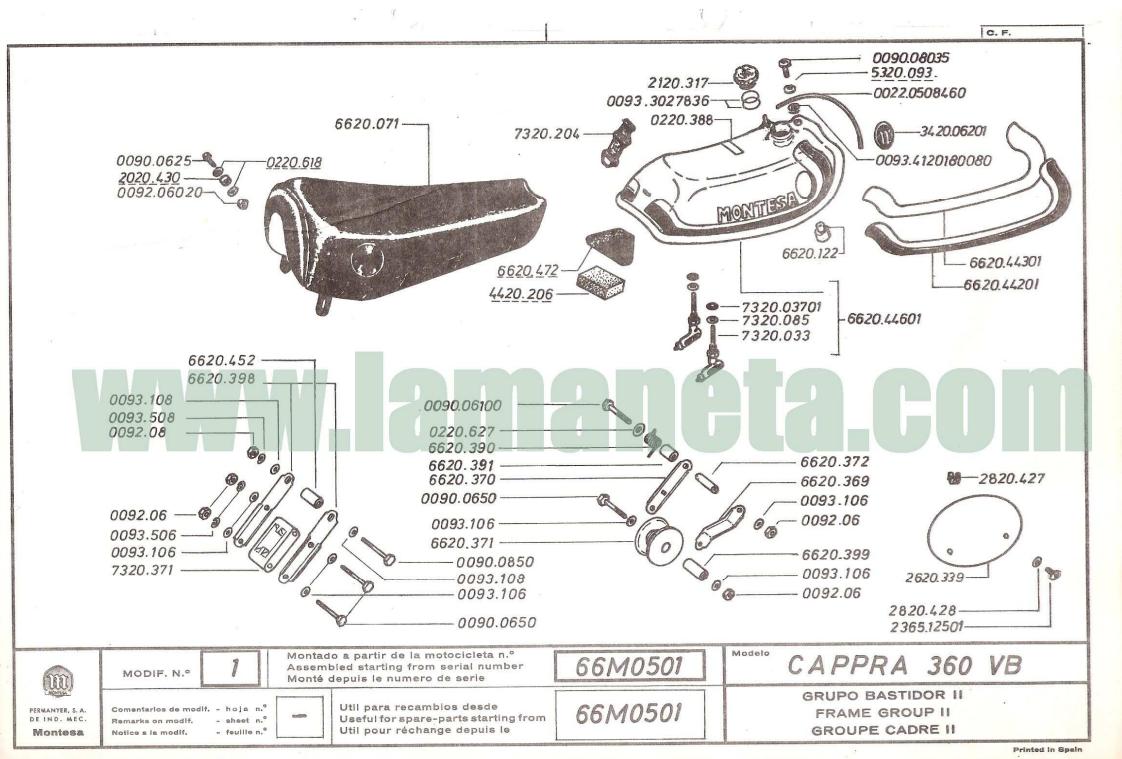
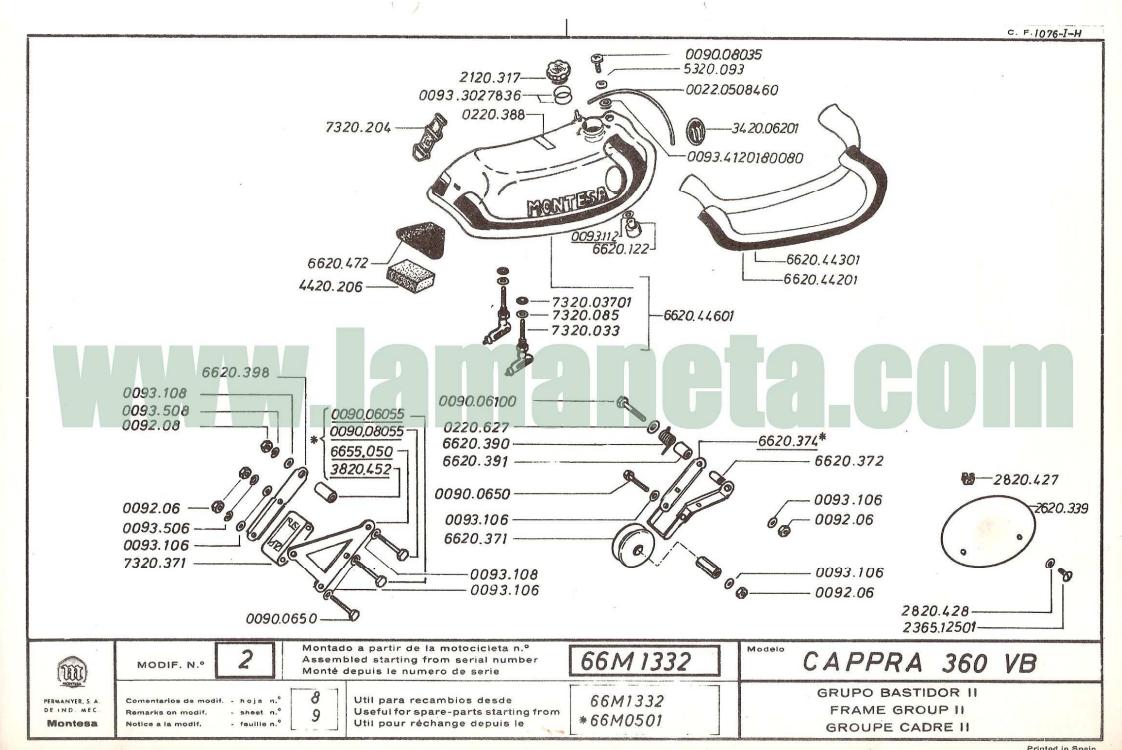


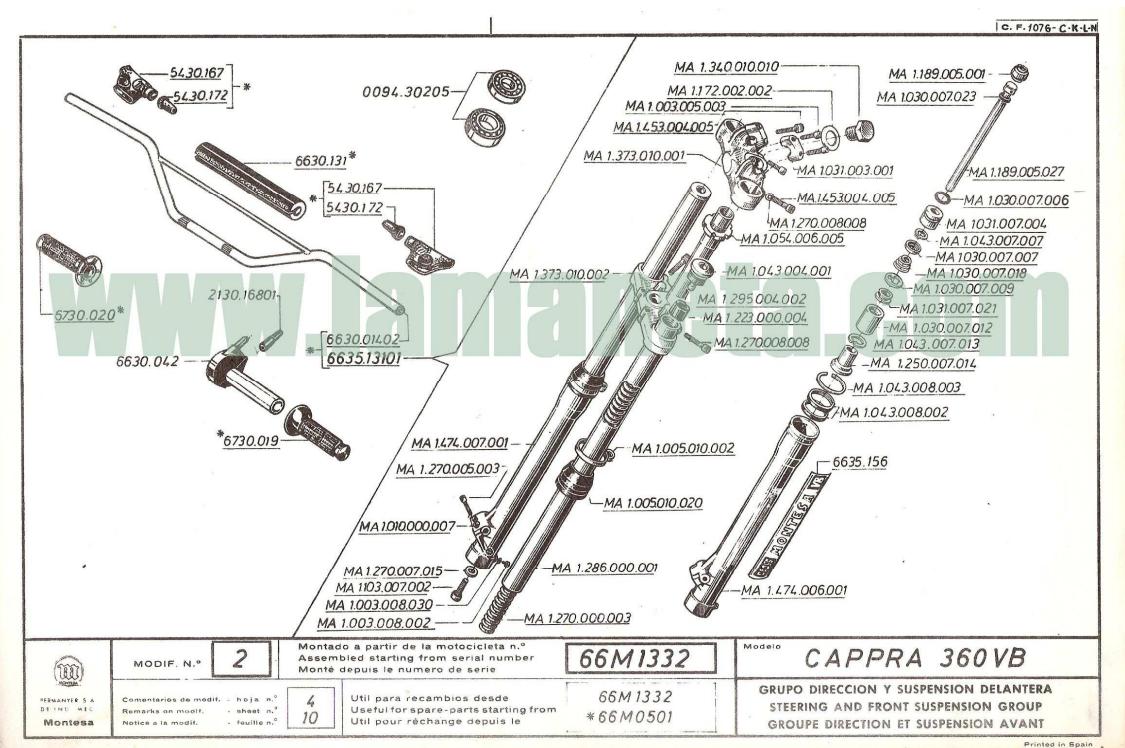
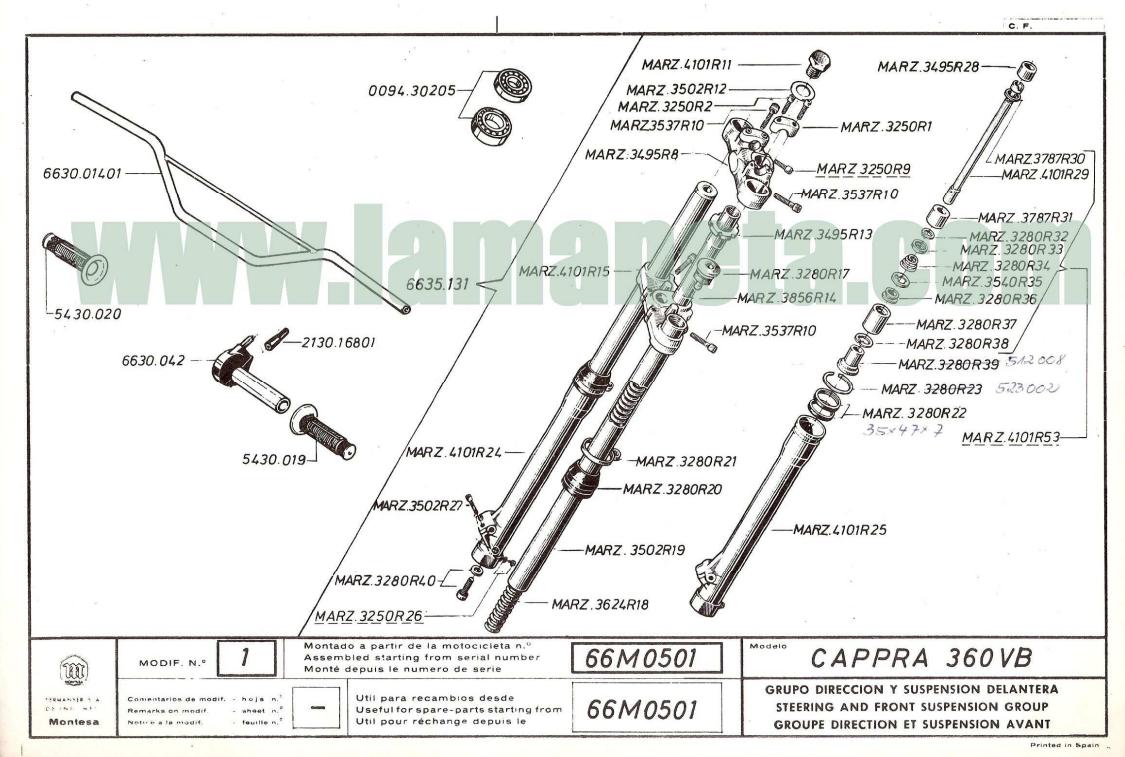


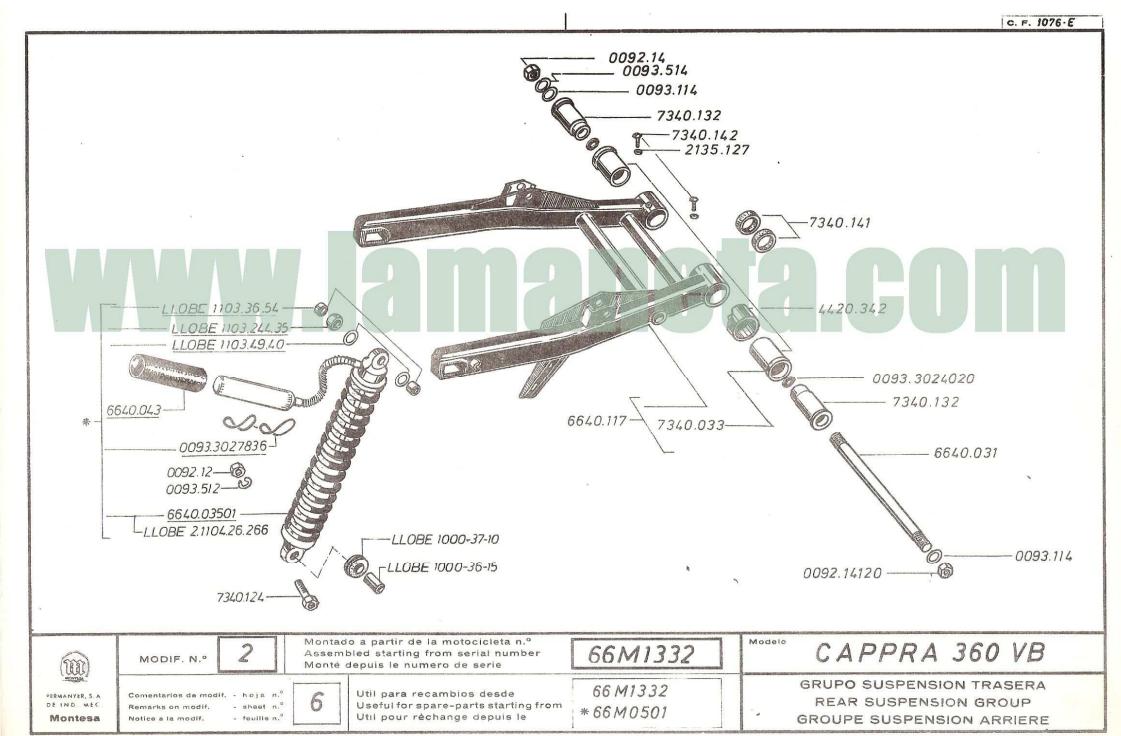
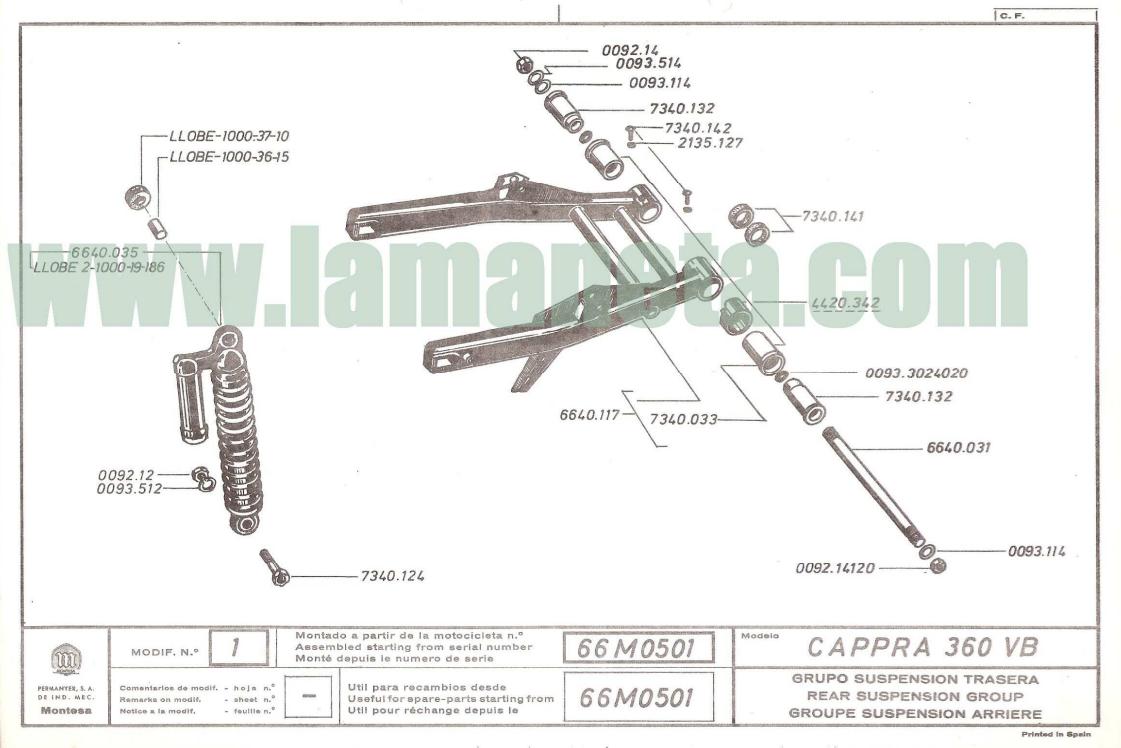


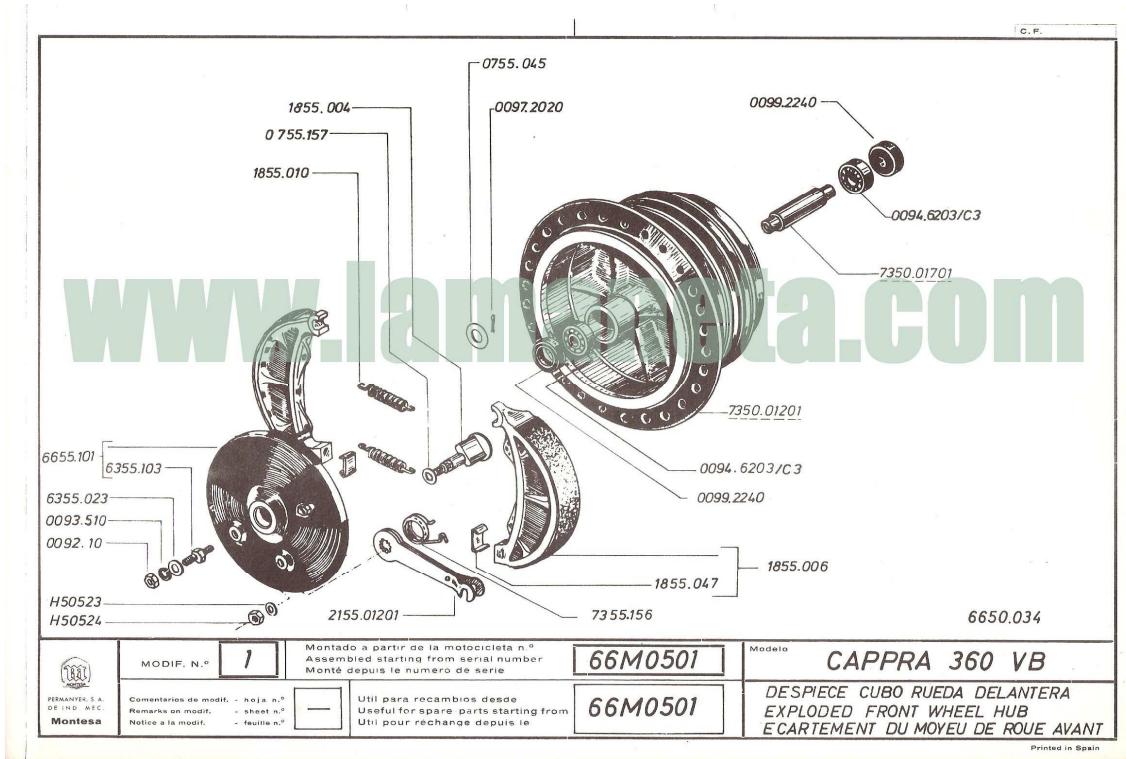
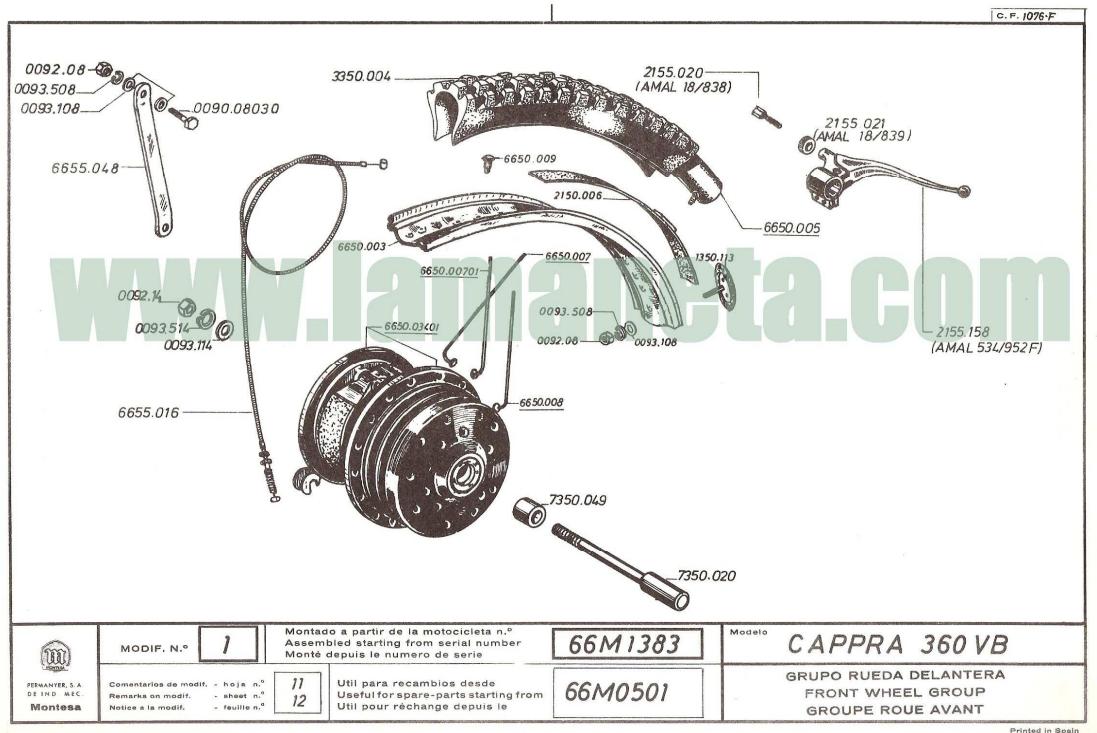


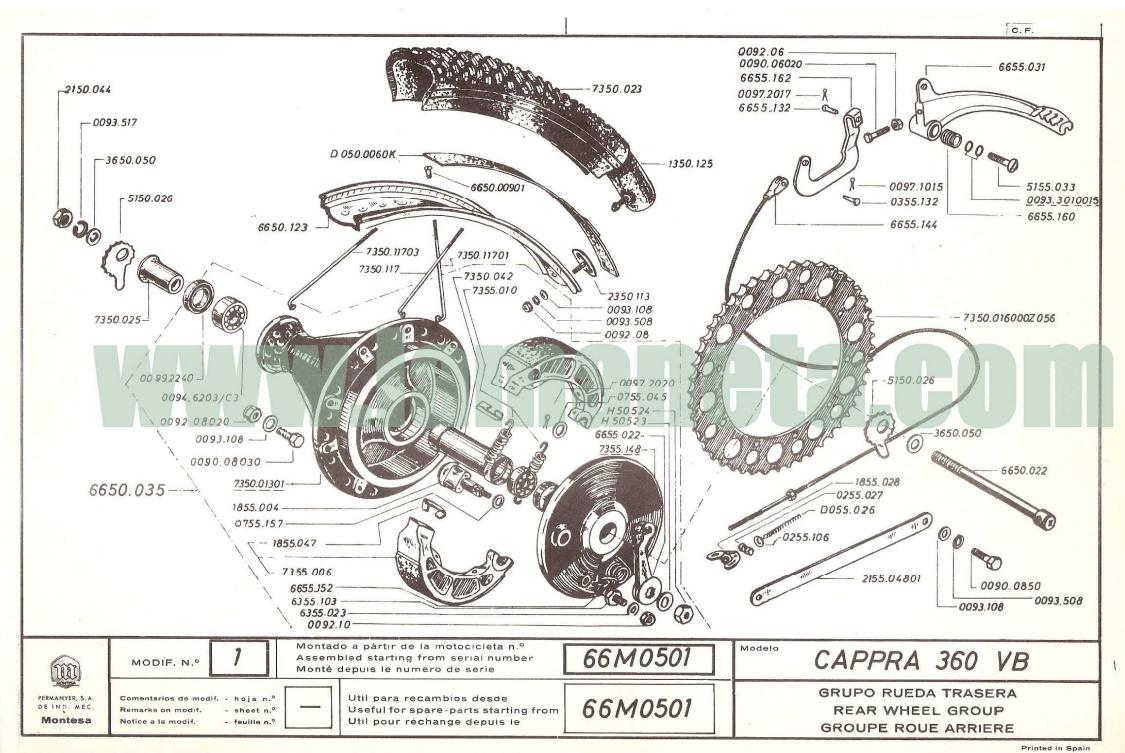
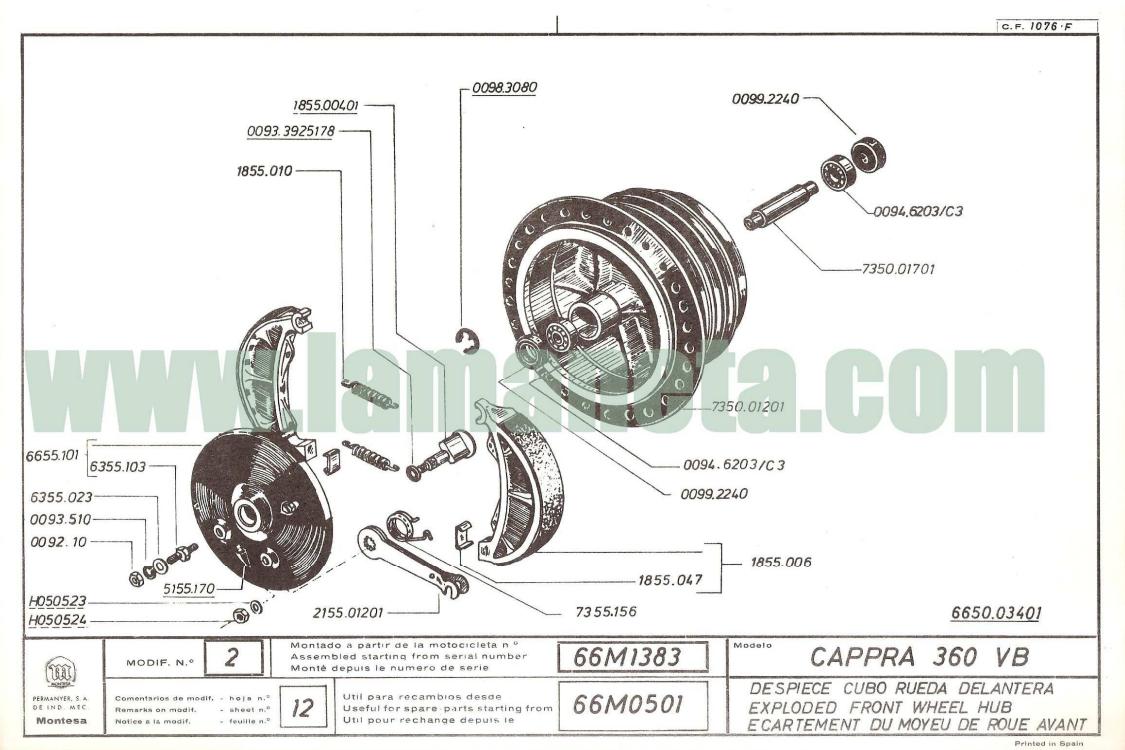


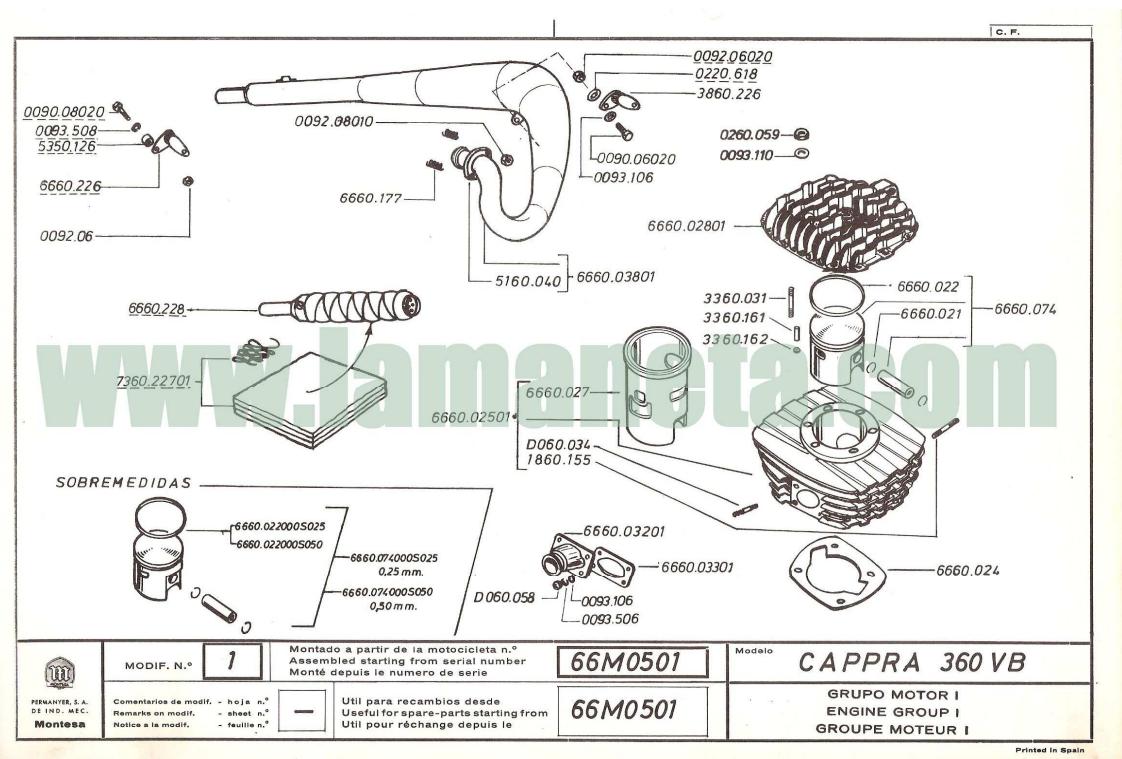
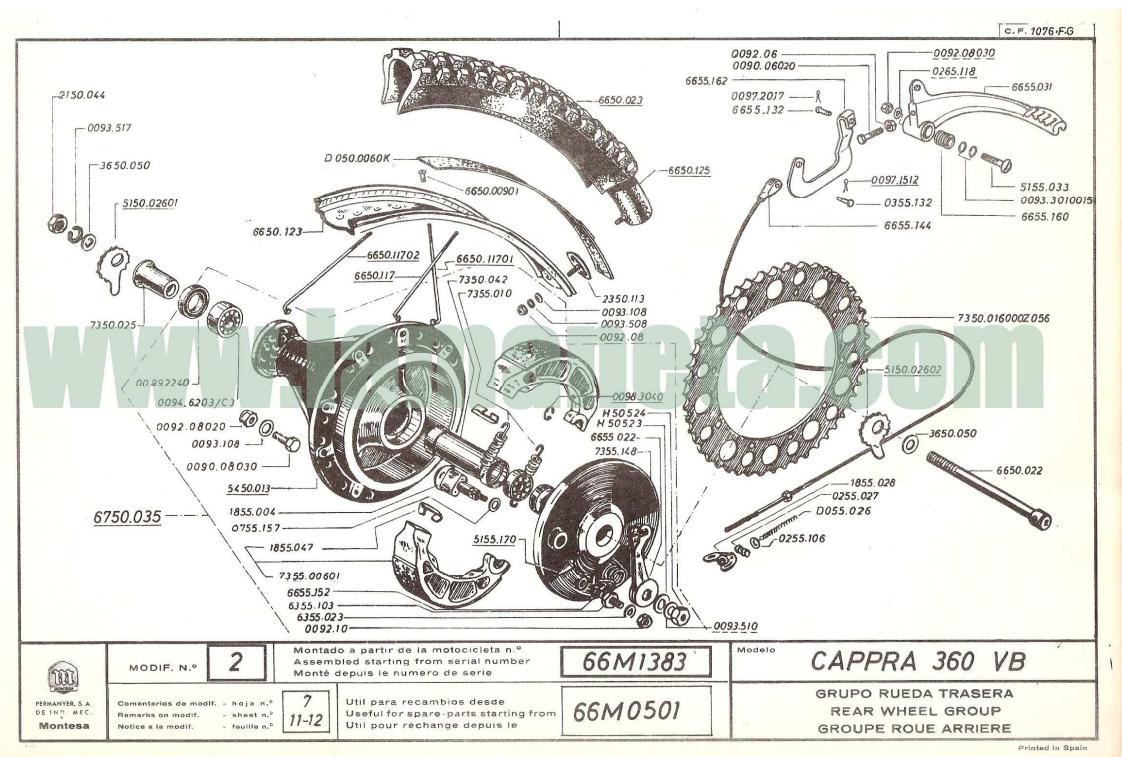


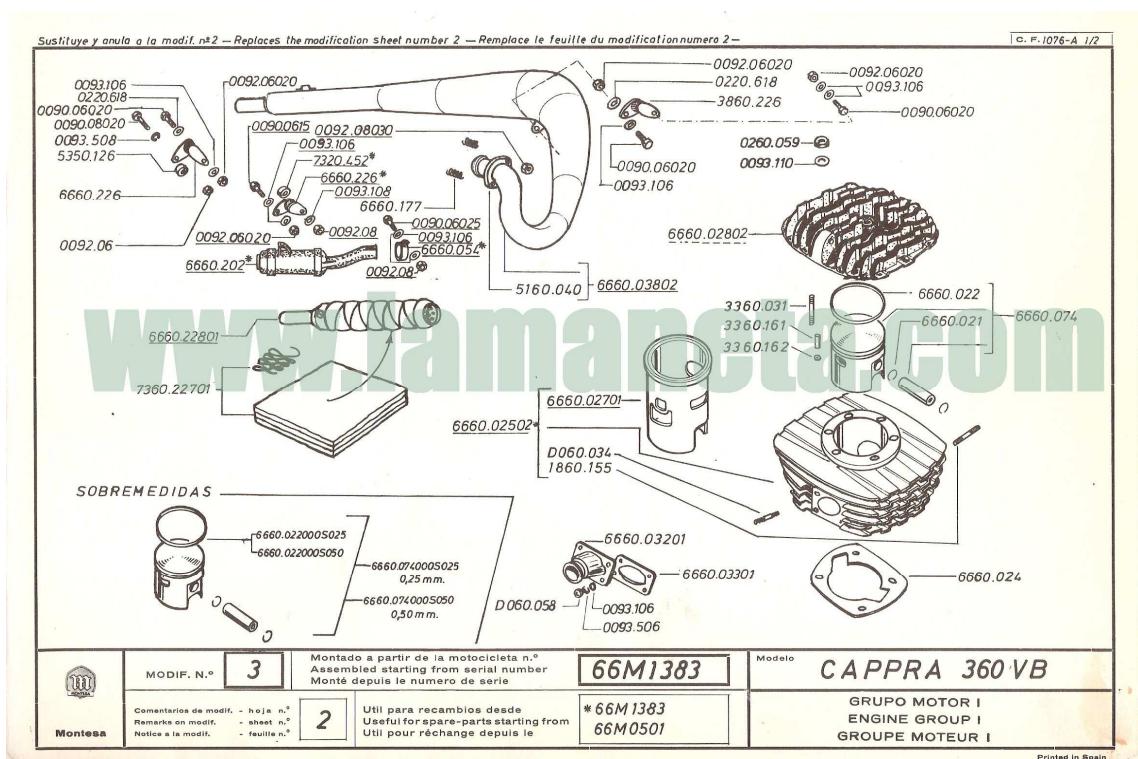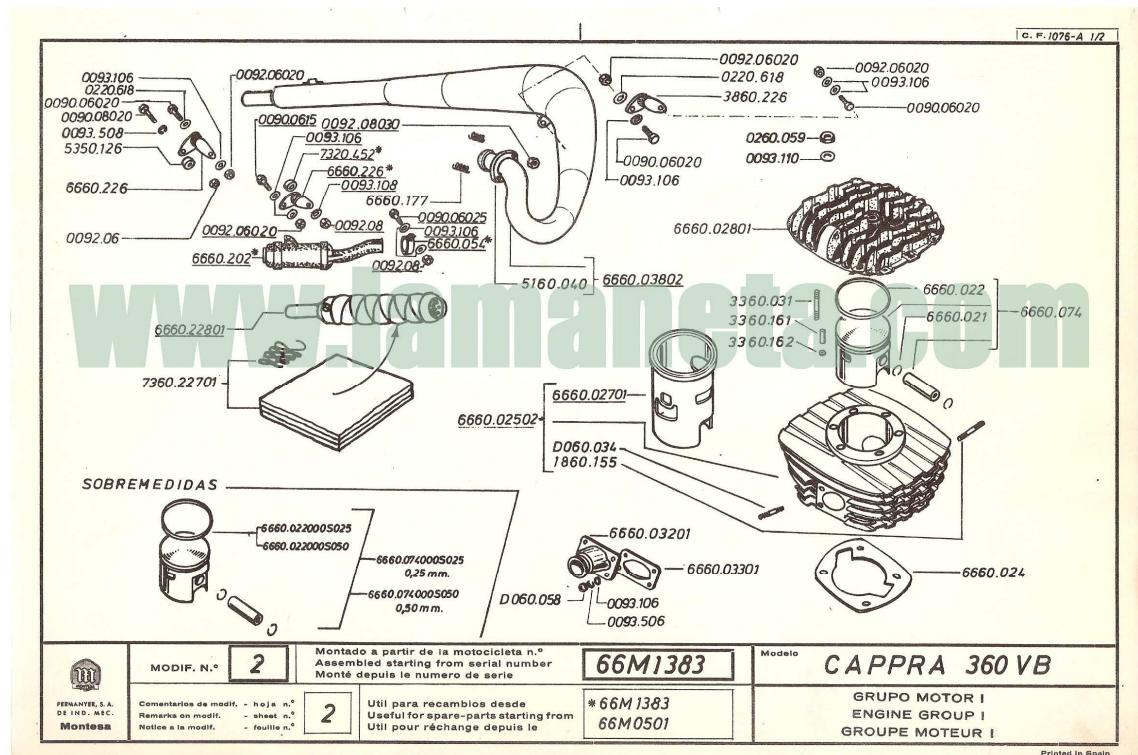


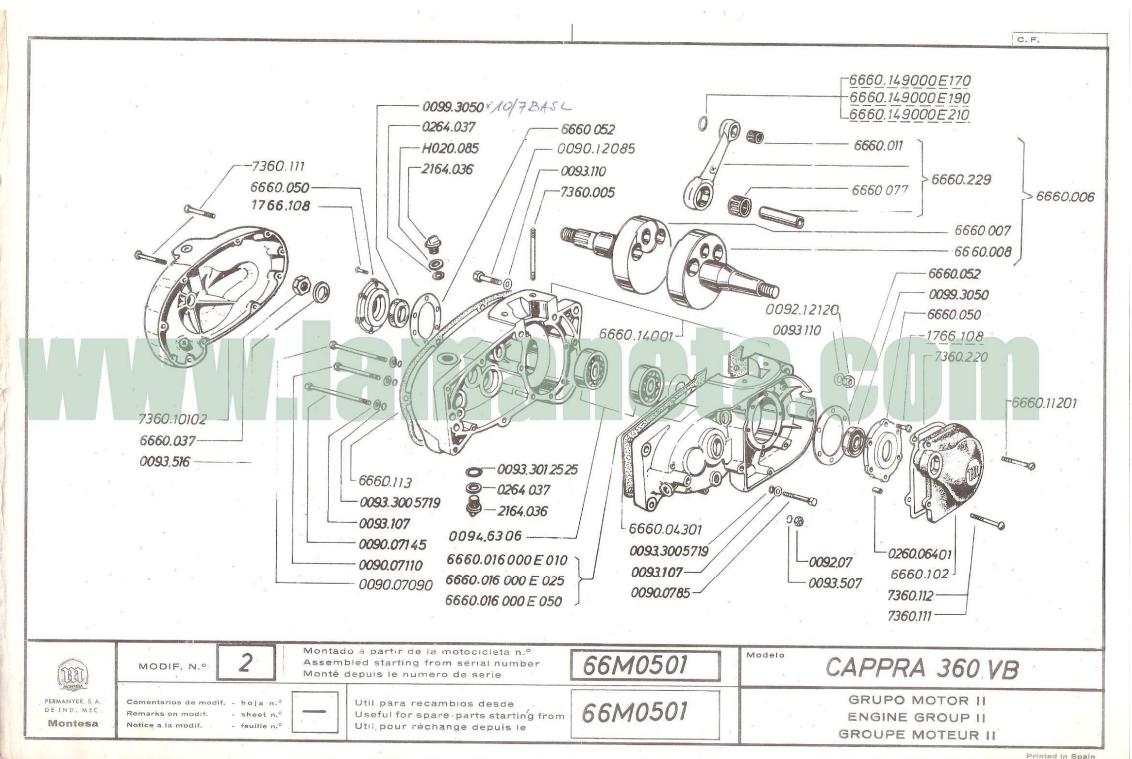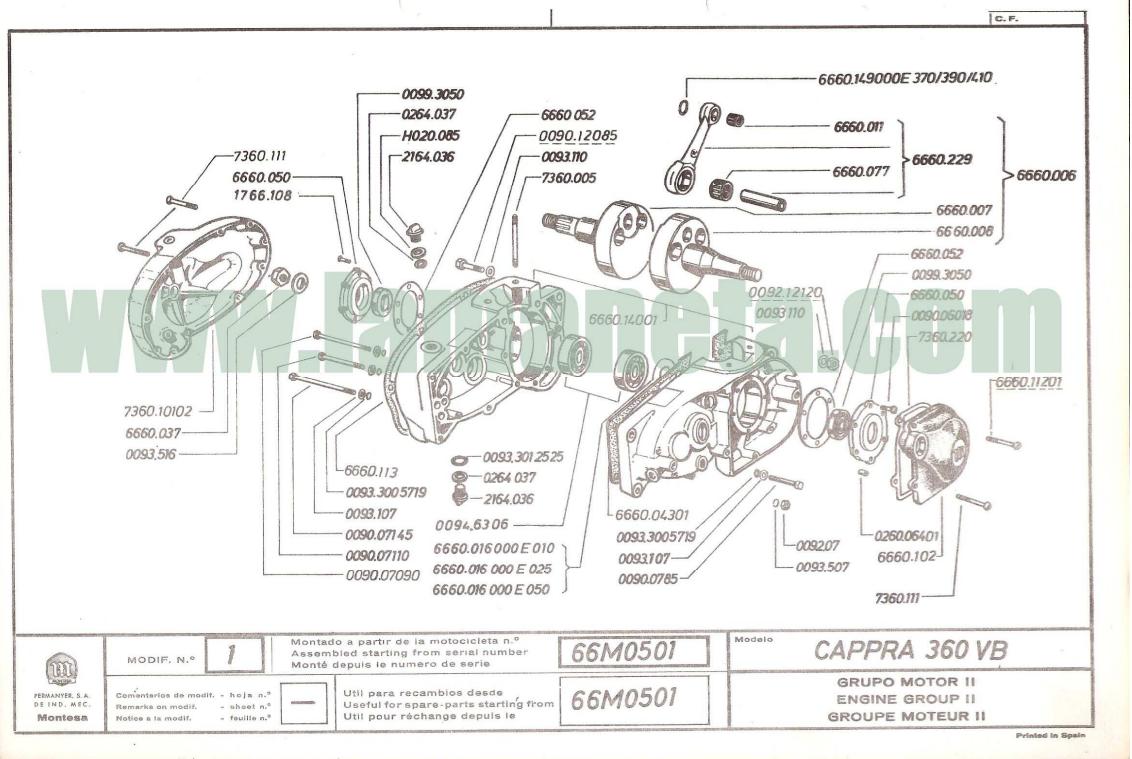

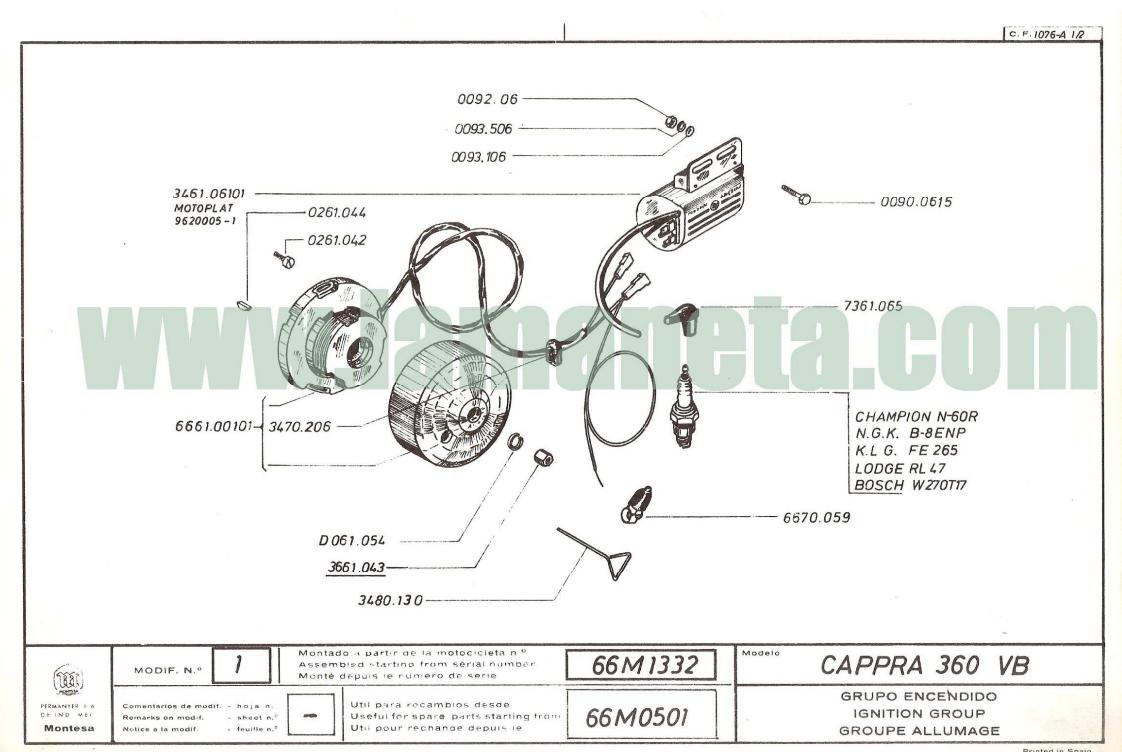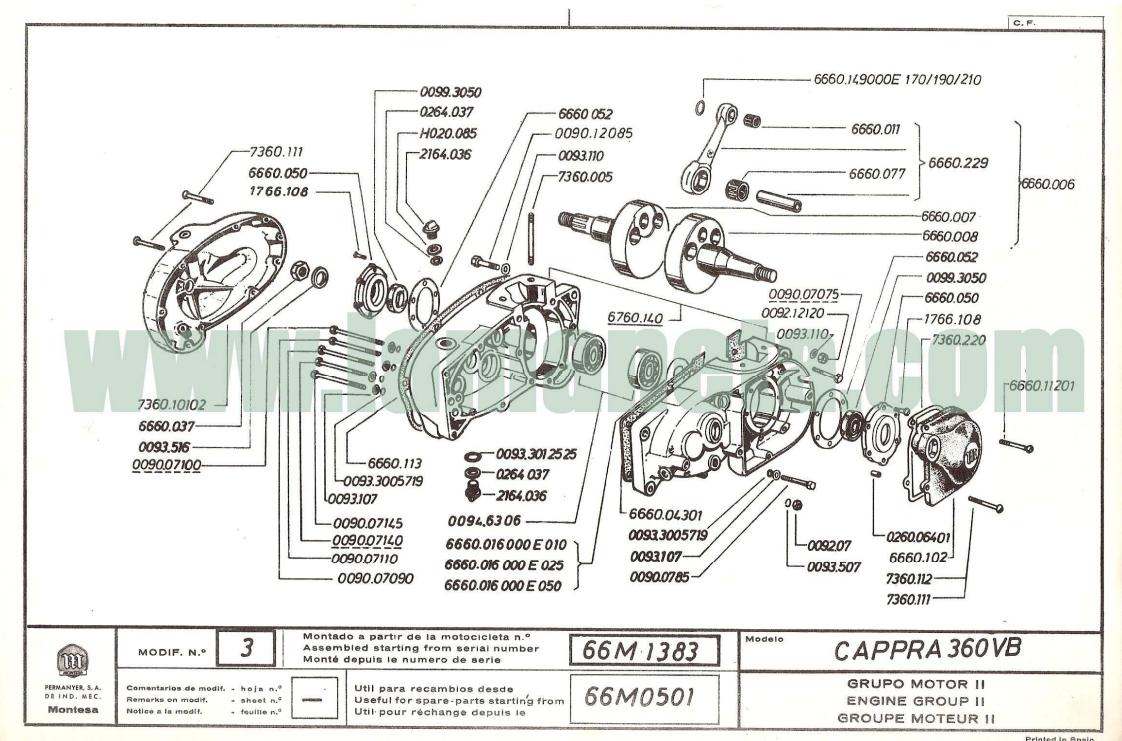

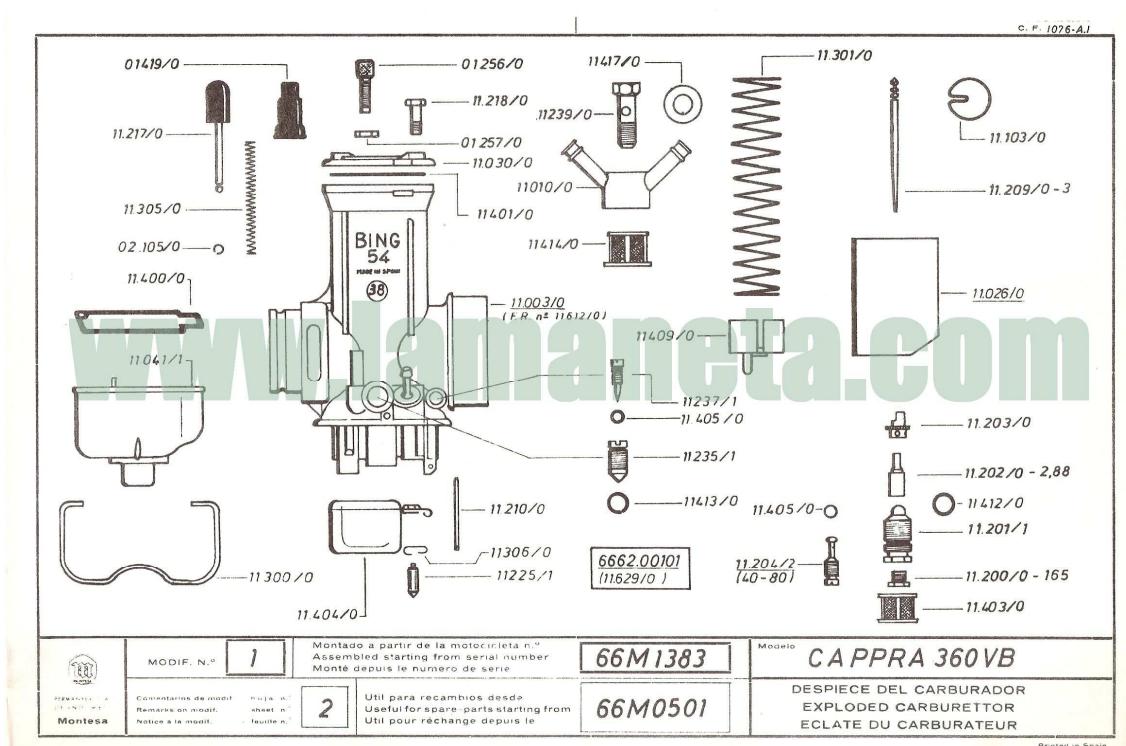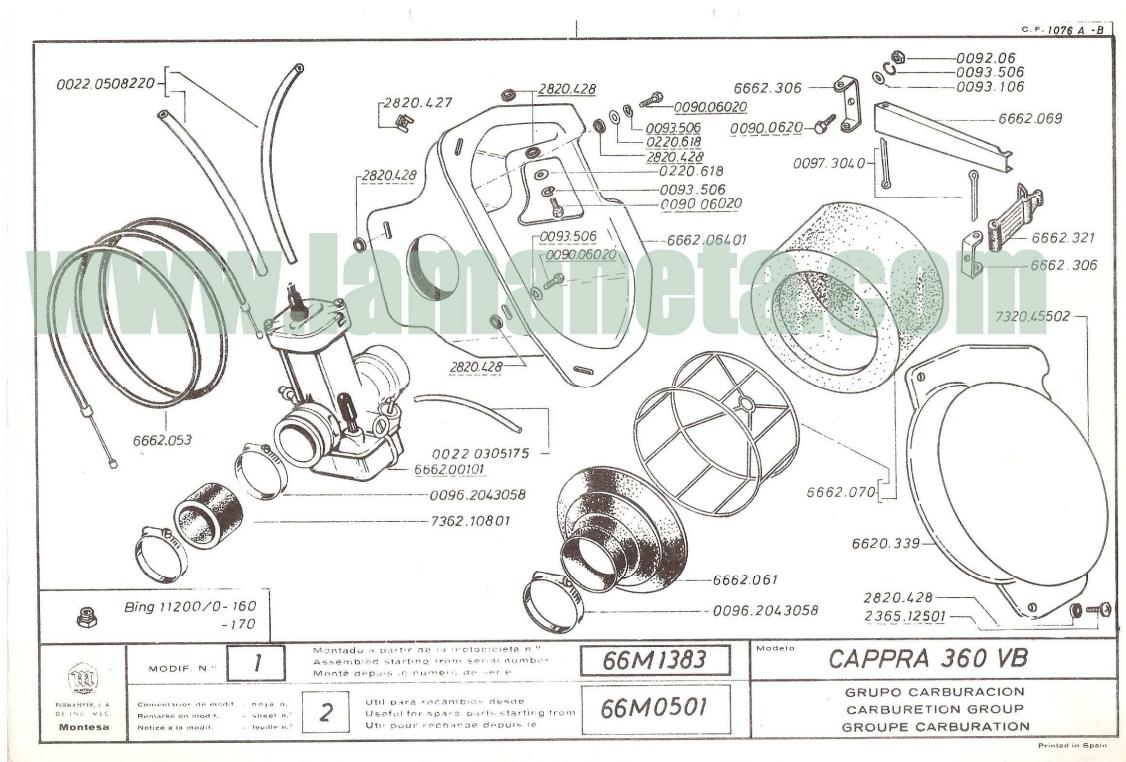

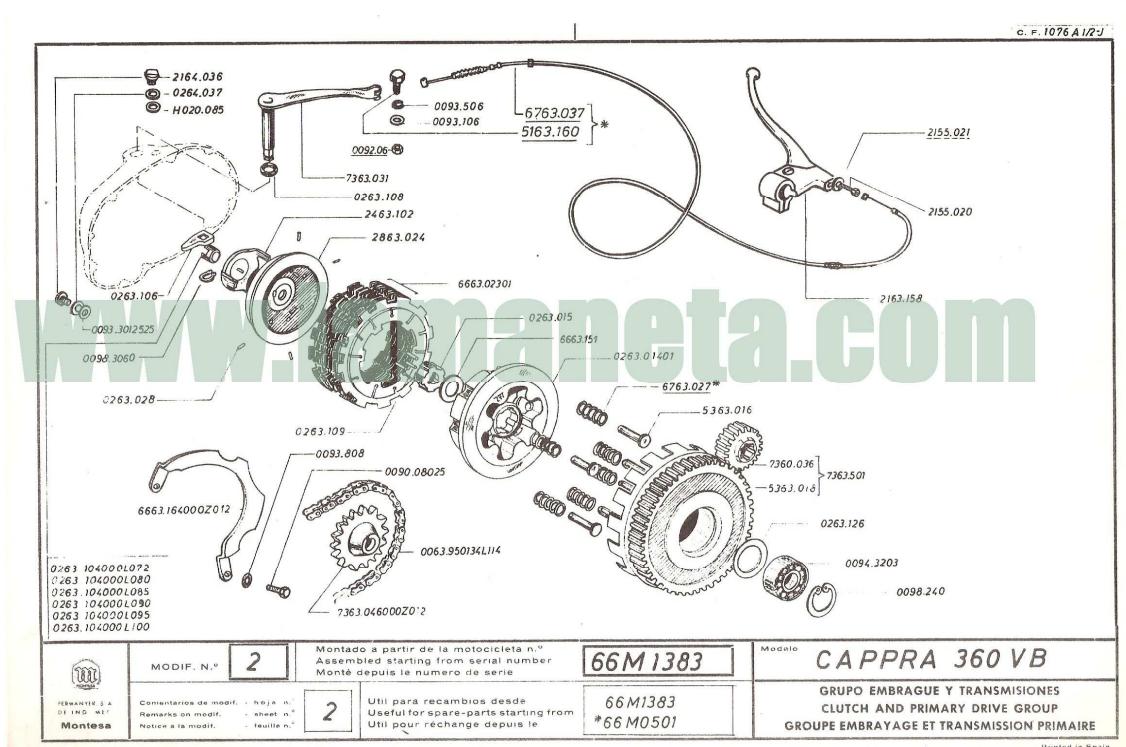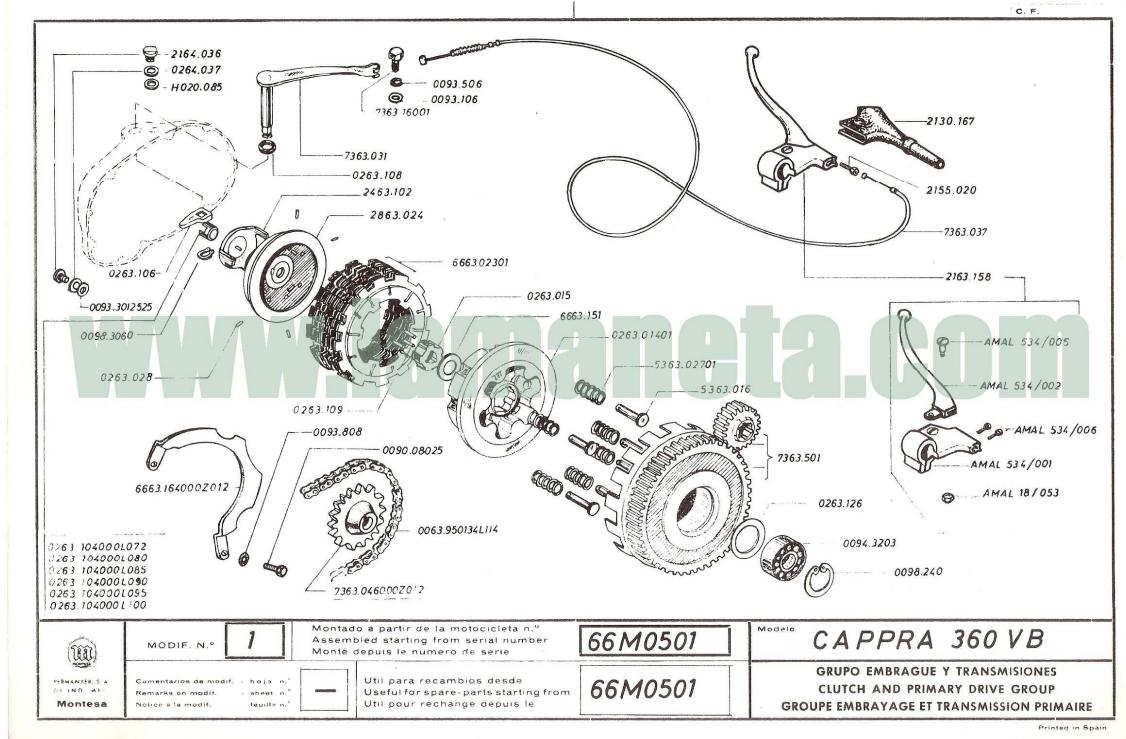

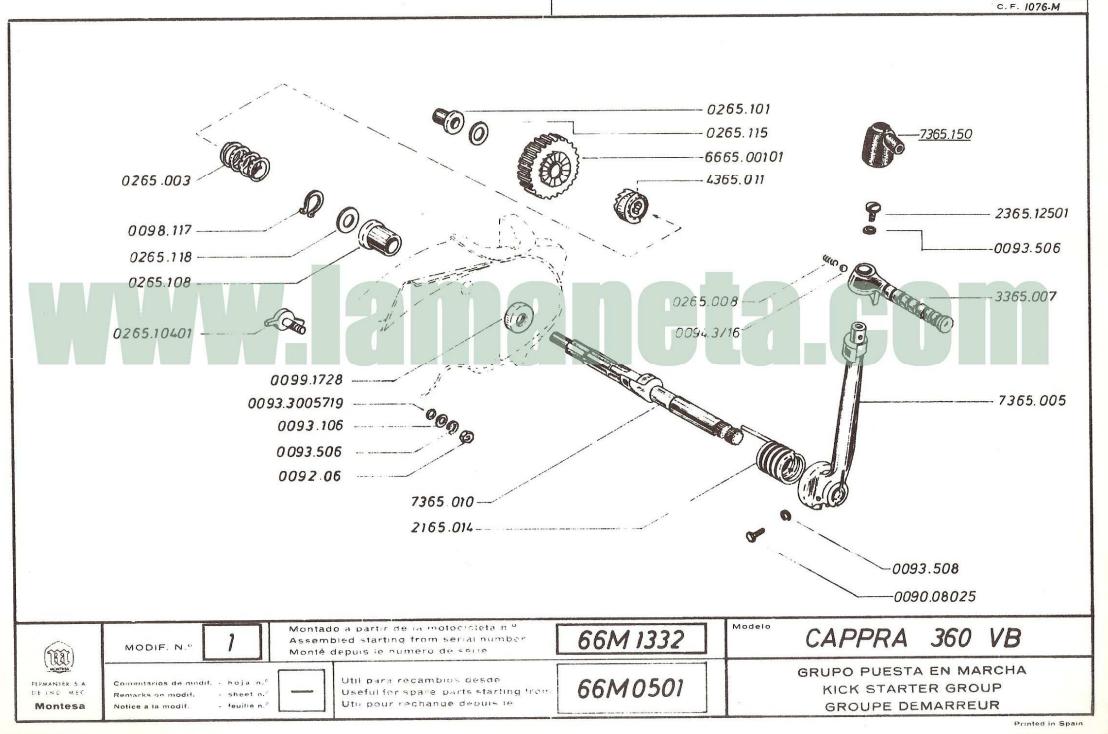

MODIF. N.º

1

Montado a partir de la motocicleta nº
Assembled starting from serial number
Monté depuis le numéro de série

66M1332

Modelo

CAPPRA 360 VB

Printed in Spain

Conveniente de modif.
Remarks on modif.
Notice à la modif.hoja n.º
sheet n.º
feuille n.º

—

Util para recambios desde
Useful for spare parts starting from
Utile pour rechange depuis le

66M0501

GRUPO PUESTA EN MARCHA
KICK STARTER GROUP
GROUPE DEMARREUR